

# OPERATION MANUAL AND INSTALLATION INSTRUCTIONS MECHANICAL PIT LEVELER MODEL M68WD AND M78WD

### READ COMPLETE INSTRUCTIONS BEFORE INSTALLING DOCK LEVELERS

Product may be covered by one or more patents. See **www.wayne-dalton.com/patents** for details.

### **TABLE OF CONTENTS**

Safety Information	3-5
Terminology And Definitions	3
Precautions	4-5
Operation	6-11
Operating Instructions	6-7
Owner / User Responsibilities	8-11
Pit Leveler Dimensions	
Installation Instructions	14-22
Installation Precautions	
Installation Instructions	15-22
Testing And Spring Adjustments	
Troubleshooting	26-28
Maintenance	29-31
Replacement Parts	32-48
Warranty	

### **TERMINOLOGY AND DEFINITIONS**

### **Important Safety Instructions**

**DEFINITION OF KEY WORDS USED IN THIS MANUAL:** 



INDICATES A HAZARDOUS SITUATION THAT, IF NOT AVOIDED, WILL RESULT IN DEATH OR SERIOUS INJURY.



INDICATES A HAZARDOUS SITUATION THAT, IF NOT AVOIDED, COULD RESULT IN DEATH OR SERIOUS INJURY.



INDICATES A HAZARDOUS SITUATION THAT, IF NOT AVOIDED, COULD RESULT IN MINOR OR MODERATE INJURY.



INDICATES INFORMATION CONSIDERED IMPORTANT, THAT IT IS NOT RELATED TO INJURY, BUT MAY RESULT IN PROPERTY DAMAGE.

**IMPORTANT:** Required key step for proper dock operation.

**NOTE:** Information only.

### **PRECAUTIONS**

### **Operational Precautions**

Read and understand these instructions to ensure safe installation and operation of the equipment.

### **A** DANGER

DO NOT STAND BETWEEN TRANSPORT VEHICLE AND DOCK LEVELING DEVICE WHEN TRANSPORT VEHICLE IS ENTERING OR LEAVING THE AREA. GETTING PINNED BETWEEN THE TRANSPORT VEHICLE AND THE LEVELER WILL CAUSE DEATH OR SERIOUS INJURY.

### **A** DANGER

DOCK LEVELER SWINGS WITH CONSIDERABLE FORCE. ACTUATING THE DOCK LEVELING DEVICE WITH ANYONE UNDER OR IN FRONT OF IT WILL CAUSE DEATH OR SERIOUS INJURY.

### **A** DANGER

KEEP HANDS, FEET AND OTHER APPENDAGES CLEAR OF HINGES AND OTHER PINCH POINTS WHEN MOVING, INSTALLING, OPERATING, SERVICING, OR OTHERWISE MANIPULATING THE DOCK LEVELING DEVICE. THIS DEVICE IS HEAVY AND MOVES WITH CONSIDERABLE FORCE, CAPABLE OF SEVERING APPENDAGES AND CAUSING SERIOUS INJURY OR DEATH.

### **A** DANGER

TOTAL WEIGHT OF LOADING VEHICLE AND LOAD SHOULD NEVER EXCEED THE DYNAMIC LOAD CAPACITY LISTED ON THE SERIAL # & MODEL TAG. OVERLOADING A DOCK LEVELING DEVICE BEYOND ITS MANUFACTURER RATED DYNAMIC CAPACITY WILL DAMAGE IT OR CAUSE IT TO COLLAPSE, WHICH MAY RESULT IN DEATH, SERIOUS INJURY AND/OR DAMAGE TO EQUIPMENT.

### **WARNING**

CHOCK/RESTRAIN ALL TRANSPORT VEHICLES. NEVER REMOVE THE WHEEL CHOCKS OR RELEASE THE RESTRAINING DEVICE UNTIL LOADING OR UNLOADING IS FINISHED, AND THE TRANSPORT VEHICLE DRIVER HAS BEEN ALERTED. DEATH OR SERIOUS INJURY MAY OCCUR IF THE TRANSPORT VEHICLE INADVERTENTLY SLIPS AWAY FROM THE DOCK DURING LOADING/ UNLOADING.

## **WARNING**

DO NOT USE A BROKEN OR DAMAGED DOCK LEVELING DEVICE OR RESTRAINING DEVICE. ENSURE ATTACHMENT WELDS ARE NOT CRACKED AND PROPER SERVICE AND MAINTENANCE PROCEDURES HAVE BEEN PERFORMED BEFORE USING. A DAMAGED OR DETACHED DOCK LEVELING DEVICE MAY COLLAPSE, CAUSING DEATH OR SERIOUS INJURY.

### **WARNING**

ENSURE THE LIP HORIZONTALLY OVERLAPS THE TRANSPORT VEHICLE BY AT LEAST 4 INCHES (102 MM) BEFORE DRIVING ONTO THE DOCK LEVELING DEVICE. USING A LEVELER WITHOUT SUFFICIENT OVERLAP MAY RESULT IN THE LIP SLIPPING OFF OF THE TRANSPORT VEHICLE AND COLLAPSING, WHICH MAY CAUSE DEATH OR SERIOUS INJURY.

### **WARNING**

MAINTAIN A SAFE DISTANCE FROM BOTH SIDE EDGES WHEN DRIVING ONTO A DOCK LEVELING DEVICE. FALLING OFF THE DOCK LEVELING DEVICE MAY RESULT IN DEATH OR SERIOUS INJURY.

## **WARNING**

USING A DOCK LEVELING DEVICE ABOVE OR BELOW THE ALLOWABLE VERTICAL WORKING RANGE MAY CAUSE IT TO COLLAPSE, CREATE PINCH POINTS, OR CAUSE DANGEROUS LIP RISE, WHICH MAY CAUSE DEATH OR OTHER SERIOUS INJURY.

## **WARNING**

OPERATING MATERIAL HANDLING OR DOCK EQUIPMENT WHILE UNDER THE INFLUENCE OF DRUGS OR ALCOHOL MAY RESULT IN DEATH OR SERIOUS INJURY.

## **WARNING**

DO NOT EXCEED 5 MPH WHEN DRIVING ON OR ACROSS A DOCK LEVELING DEVICE. DO NOT STOP OR ACCELERATE ABRUPTLY WHEN LOADING VEHICLE WHEELS ARE ON THE LIP OR PLATFORM. DRIVE SLOW AND STEADY ACROSS THE DOCK LEVELING DEVICE. FAILURE TO COMPLY COULD CAUSE THE DOCK LEVELING DEVICE TO COLLAPSE, RESULTING IN DEATH OR SERIOUS INJURY.

## **A** CAUTION


NEVER LEAVE UNATTENDED EQUIPMENT, VEHICLES, OR MATERIALS ON DOCK LEVELING DEVICE.

### PRECAUTIONS CONTINUED...

**Operational Precautions Continued...** 

### **A** DANGER

KEEP HANDS, FEET AND OTHER APPENDAGES CLEAR OF HINGES AND OTHER PINCH POINTS WHEN MOVING, INSTALLING, OPERATING, SERVICING, OR OTHERWISE MANIPULATING THE DOCK LEVELING DEVICE. THIS DEVICE IS HEAVY AND MOVES WITH CONSIDERABLE FORCE, CAPABLE OF SEVERING APPENDAGES AND CAUSING SERIOUS INJURY OR DEATH.

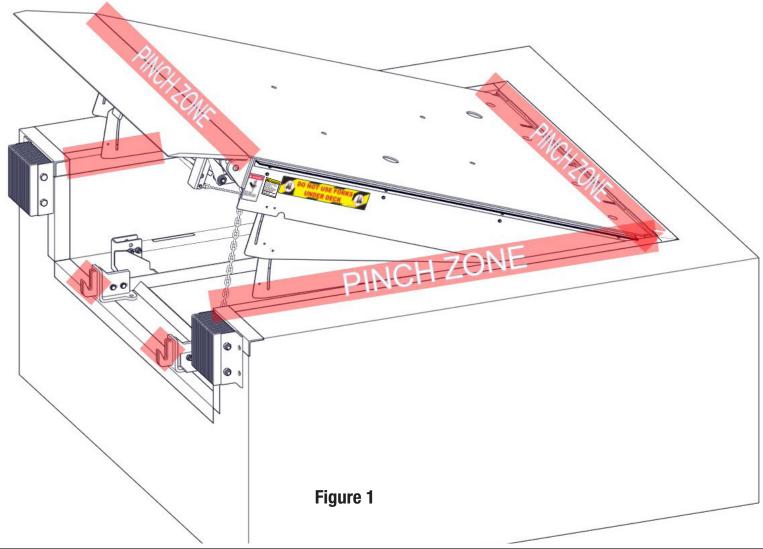

### **OPERATING INSTRUCTIONS**

NOTE: Model M68WD 35K shown in all figures for reference.

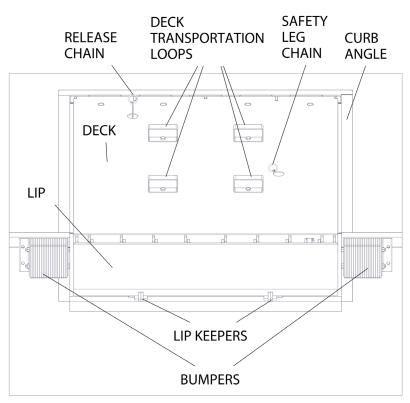


Figure 2

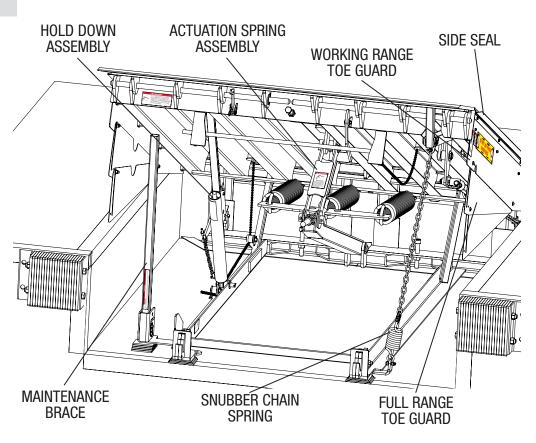


Figure 3

### **OPERATING INSTRUCTIONS CONTINUED...**

## **A** DANGER

Read and follow all instructions, warnings and maintenance schedules in the manual.

- Never use hands or equipment to move ramp or lip. Using material handling equipment to lower ramp will cause premature wear or damage to the dock leveling device.
- Ensure truck bed supports extended lip or leveler frame supports the ramp before driving on ramp.
- Stay clear of hinges and front and sides of moving dock leveler.
- DO NOT ENTER THE PIT unless dock leveler is securely supported by maintenance brace and a second means of bracing.

FAILURE TO FOLLOW THESE INSTRUCTIONS WILL RESULT IN DEATH OR SERIOUS INJURY.

## **WARNING**

- Operation and servicing of dock leveler is restricted to authorized personnel.
- Never use damaged or malfunctioning dock leveler. Report problems immediately to supervisor.
- Before activating dock leveler:
  - Always chock trailer wheels or engage trailer restraint before operating dock leveler or beginning to load or unload.
  - Ensure trailer is backed up against bumpers.
  - Remove any end load, if required.
  - Check trailer alignment to avoid lip interference. If lip does not lower to trailer bed, reposition vehicle.
- Before allowing vehicle to leave the dock always:
  - Ensure no equipment, material or people are on dock leveler.
  - Return dock leveler to its stored position at dock level.

FAILURE TO FOLLOW THESE INSTRUCTIONS COULD RESULT IN DEATH OR SERIOUS INJURY.

#### EXTENDING THE LEVELER ONTO BED OF TRANSPORT VEHICLE

- 1. Standing on the warehouse floor, grasp the ring connected to the release chain and pull, maintaining slight tension until the platform reaches the fully raised position.

  Release the ring.
- 2. Carefully, walk out onto the platform of dock leveler. This will allow the dock to lower, resting its lip onto the transport vehicle.

**IMPORTANT:** The permitted total gross weight (Load + Loading Equipment [eg: forklift, pallet mover, etc.]) traversing the leveler should not exceed the Dynamic Capacity of the leveler. The Dynamic Capacity is listed as ##K on the SERIAL # & MODEL TAG under "DYN CAPACITY", where ## is the total gross weight in thousands of pounds.

#### **BELOW DOCK ENDLOADING**

- 1. Standing on the warehouse floor, grasp the ring connected to the release chain and pull, maintaining slight tension until the platform reaches the fully raised position. Release the ring.
- 2. Walk onto the platform, not allowing the lip to fold down. Pull and hold the safety leg chain ring which is located towards the lip-end of the dock leveler. Keep this chain taut until the leveler descends into the below-dock position. Release the safety leg pull chain ring when the dock leveler lip is resting between the building and the transport vehicle.

#### RETURNING LEVELER TO STOWED POSITION

- 1. Grasp the ring connected to the release chain and pull, holding the ring and chain taut while the platform reaches the fully raised position. Release the ring.
- 2. Slowly walk the platform down, allowing the lip to fold down and clear the transport vehicle. Continue to walk toward the end of the platform, until the lip is resting inside the lip keepers and the platform is parallel with the warehouse door.

### **OWNER / USER RESPONSIBILITIES**

#### **GENERAL**

Like other industrial devices, misuse and improper maintenance of dock leveling devices can result in injury or death.

#### **APPLICATION CONSTRAINTS**

Use of a dock leveling device shall take application constraints into consideration; including, but not limited to:

- a) Site Considerations:
  - 1. Driveway grades.
  - 2. Pit and bumper projections.
  - 3. Loading dock height.
- b) Transport Vehicle Considerations.
  - 1. Tractor operations.
  - 2. Shunt truck or yard jockey operations.
- c) Material Handling Equipment Considerations:
  - 1. The heaviest material handling equipment and load.
  - 2. The distribution of weight between the material handling equipment's front and rear axles.
  - 3. Gross vehicle weight (GVW) being driven across the dock leveler.
  - 4. The number of cycles driven across the dock leveler.
  - 5. The speed of material handling equipment moving across the dock leveler.
  - 6. The use of three-wheel vs. four-wheel fork trucks.
  - 7. Attachments on the front end of the material handling equipment.
  - 8. The direction of material handling equipment travel.
- d) Dock Leveler Considerations:
  - 1. The life expectancy of the dock leveler.
  - 2. The loading slope above or below dock leveler.
  - 3. The lip length.

In selecting dock leveling devices, it is important to consider present requirements, future plans and adverse environmental conditions.

The owner/user shall provide application information to the manufacturer to receive recommendations on appropriate equipment specifications and capacity.

#### INSTALLATION

#### PLACARDS AND WARNINGS

The owner/user shall ensure that the following are in place, legible, and available to operators:

- Nameplates
- Instruction Placards
- Safety Signs Or Labels
- Operating And Maintenance Manuals

The owner/user shall obtain replacement nameplates, instruction placards, safety signs or labels, and manuals from the manufacturer, if needed. Placards, markings, and labels should not be obscured from the view of operating or maintenance personnel for whom Such information are intended.

#### FIXED LEVELING DEVICES

If the dock leveling device is recessed in a concrete pit, the top three sides of the recess and driveway end of pit floor shall have steel angles or channels anchored into the concrete as recommended by the dock leveling device manufacturer.

#### FIXED TYPE

A fixed type is a structure designed for stationary mounting to the dock, located at either the dock face or recessed into a pit. Placement of the bridging structure into a working or stored position will usually be aided by a mechanism incorporated into the design.

#### MODIFICATIONS TO DOCK LEVELING DEVICES

Dock leveling devices can become hazardous if the manufacturer's instructions regarding modifications or adjustments are not followed.

Modifications or alterations of dock leveling devices shall be made only with written permission of the original manufacturer. These changes shall be in conformance with all applicable provisions of the latest ANSI MH30.1 standard and shall also satisfy all safety recommendations of the original equipment manufacturer for the particular application.

Modifications or additions that affect capacity and appropriate dock leveling device operation shall not be performed without manufacturer's prior written approval.

### OWNER / USER RESPONSIBILITIES CONTINUED...

#### INFORMATION FOR USE

The owner/user shall verify that the material listed in this manual have been received, and that the information contained herein is made available for the instruction and training of personnel entrusted with the installation, operation or maintenance of the dock leveling device.

#### LOADING DOCK OPERATING PERSONNEL TRAINING

The owner/user should recognize the inherent danger of the interface between dock and transport vehicle. The owner should, therefore, train and instruct loading dock operating personnel in the proper use of dock leveling devices in accordance with information provided by the manufacturer.

An effective loading dock operating personnel training program should focus on the user company's policies, operating conditions, and the manufacturer's specific instructions that were provided with the dock leveling device. The complete training program should be presented to all new operators and not condensed or eliminated for those claiming previous experience.

The loading dock operating personnel training program should consist of, but not necessarily be limited to, the following:

- a) Select the operator carefully. Consider physical qualifications, job attitude and aptitude.
- b) Assure that the operator reads and fully understand the complete manufacturer's instruction manual.
- c) Emphasize the impact of proper operation upon the operator, other personnel, material being handled, and equipment. Cite all rules and why they are formulated.
- d) Describe the basic fundamentals of dock leveling device and component design as related to safety, e.g., mechanical limitations, stability, etc.
- e) Introduce the equipment. Show control locations and demonstrate functions. Explain how they work when used properly and problems when they are used improperly.
- f) Assure that the operator understands the capacity rating and other nameplate data, including the operator instructions and all precautionary information appearing on the dock leveling device.
- g) Supervise operator practice of equipment operation.
- h) Develop and administer written and practical performance tests. Evaluate progress during and at completion of the course.
- i) Administer periodic refresher courses. These may be condensed versions of the primary course and include on-the-job operator evaluation.

#### **OPERATIONS**

This clause contains broad operation standards applicable to dock leveling devices. Only operators trained to strictly adhere to the operating instructions stated in this clause shall be permitted to operate dock leveling devices. Unusual operating conditions may require additional precautions and special instructions.

The dock leveling device shall not be used outside its vertical working range or outside the manufacturer's labeled rated capacity. It shall also be compatible with the loading equipment and other conditions relating to dock activities.

The owner/user should recognize the inherent danger of the interface between the dock and the transport vehicle. The owner/user shall ensure that operators fully understand that proper operation is the operator's responsibility. The owner/user shall also ensure that operators are fully knowledgeable of, and observe, the operation rules and practices in this clause.

Proper operation of dock leveling devices is the responsibility of the operator. The operator shall have an ability to assess the working conditions and environment around the loading dock and an aptitude for identifying possible issues related to the process and use of the equipment.

Only authorized personnel shall be permitted to operate a dock leveling device. Operators shall be qualified as to visual, auditory, physical, and mental ability to operate the device safely in accordance with the manufacturer's instructions. The operator shall know, understand, and follow the manufacturer's operating instructions and all precautionary labeling on the dock leveling device. The operator shall develop working habits and the awareness of hazardous conditions that help to protect the operator, other personnel, the dock leveling device and other material associated with the task. The operator shall also know, understand, and follow the operation and function of all controls before undertaking operation of the dock leveling device.

### OWNER / USER RESPONSIBILITIES CONTINUED...

#### TRANSPORT VEHICLE REQUIREMENTS

#### TRANSPORT VEHICLE POSITION

A dock leveling device shall be designed and installed so that when a transport vehicle is positioned as close as practicable to the loading dock, there shall be an overlap of at Special care should be taken on the inspection of pressure containing systems, least 4 in. (102 mm) between the front edge of the lip of the dock leveler and the edge of the door or sill of the transport vehicle.

The loading dock area shall be designed so that the transport vehicle can be parked in a position relatively perpendicular to the dock face, centered with, and as close as practical to, the dock leveling device.

#### USE OF POSITIVE RESTRAINTS

When goods are transferred between the loading dock and the transport vehicle, the brakes on the transport vehicle shall be applied and wheel chocks or positive restraints. Special attention shall be paid to the condition of electrical insulation. that provide the equivalent protection of wheel chocks shall be engaged. Also, whenever possible, air-ride suspension systems should have the air exhausted prior to performing loading or unloading operations.

Refer to the latest ANSI MH30.3, Vehicle Restraining Devices: Performance and Testing for additional information on restraining the vehicle.

#### INSPECTION

Dock leveling devices may become hazardous if the manufacturer's instructions regarding maintenance, repairs, or adjustments are not followed.

All dock levelers shall be regularly inspected and maintained in conformance with good practice and the manufacturer instructions.

Dock leveling devices shall be kept in a clean condition to minimize fire hazards and facilitate detection of loose, worn, damaged or defective parts.

At the beginning of each shift and before operation of the dock leveling device, the operator shall inspect the condition of the dock leveling device, giving special attention DAMAGE to the following:

- a) Free of debris or obstruction
- b) Precautionary labeling intact and legible
- c) Guards or safety devices present and functional
- d) Controls fully operational
- e) Free of structural defect or damage
- f) All other items specified by the manufacturer.

Actuators (including springs, hydraulic cylinders, pneumatic cylinders, and air bags), valves, hoses, fittings, safety devices and other components shall be checked to ensure that nothing has developed to the extent that it would create a hazard or interfere with safe operation.

including hoses.

Control mechanisms, fastening and warning devices, dock leveling device overload devices, quards and safety devices, deck, lip, and frame members shall be carefully and regularly inspected and maintained in accordance with the manufacturer's recommendations.

All electrical components including motors, switches, limit switches, indicator lights, protective devices, conductors, and connections shall be regularly inspected and maintained in conformance with good practices and the manufacturer's instructions.

Manufacturer's recommended periodic maintenance and inspection procedures in effect at date of shipment shall be followed, and written records of the performance of these procedures should be maintained.

#### **MAINTENANCE**

Maintenance and inspection of all dock leveling devices shall be performed in conformance with the following practices. In addition, maintenance and inspection shall be performed in accordance with the manufacturer's recommendations.

- a) A scheduled planned maintenance program shall be followed.
- b) Only trained and authorized personnel shall be permitted to maintain, repair, adjust, and inspect dock leveling devices.
- c) Use only original equipment manufacturer parts, manuals, maintenance instructions and labels; or their equivalent.

Dock leveling devices that are structurally damaged or have experienced a sudden loss of support while under load, such as might occur when a transport vehicle is pulled out from under the dock leveling device, shall be removed from service, inspected by the manufacturer's authorized representative, and repaired as recommended by the manufacturer before being placed back in service.

### OWNER / USER RESPONSIBILITIES CONTINUED...

#### **REPAIR**

If the dock leveling device is found to require repair or cannot be used in its intended operating condition, the matter shall be reported immediately to the owner/user's designated authority. The dock leveler shall be taken out of service until it has been restored to an acceptable operating condition.

The operator shall not make repairs or adjustments unless specifically authorized and qualified to do so.

Before starting repair or inspection of a dock leveler device:

- a) Secure and restrict access in and around the dock position (dock and driveway)
- b) Read, understand, and follow all maintenance instructions provided by the dock leveling device manufacturer
- c) Follow all dock leveling device maintenance safety instructions
- d) Remove the load from the platform
- e) Disconnect power and follow established lockout/tag-out policies as required.


Avoid fire hazards and have fire protection equipment present in the work area. Do not use an open flame to check the level or to check for leakage of any fluid. Do not use open pans of fuel or flammable cleaning fluids for cleaning parts. Properly ventilate work area and keep it clean and dry. Care shall be taken to ensure that all replacement parts meet or exceed original equipment manufacturer's specifications.

#### **CONFINED SPACE**

If a confined space entry associated with operations or maintenance of a dock leveling device is required, the confined space procedures shall comply with ANSI/ASSP Z117.1.

## PIT LEVELER DIMENSIONS

**NOTE:** Standard bumpers shown.

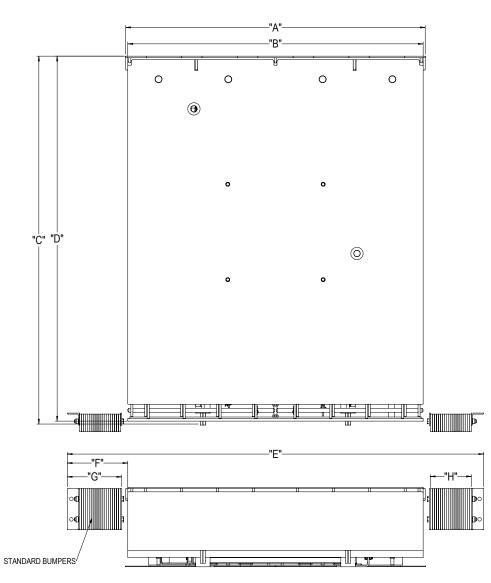


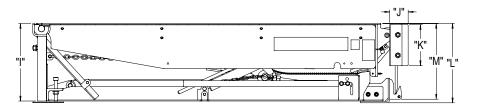


Figure 4

DOCK LEVELER DIMENSIONS												
MODEL #	MODEL # "A" "B" "C" "D" "E" "F" "G" "H" "I" "J" "K" "L"											
M68WD	73.0"	72.0"	89.7"	89.1"	101.5"	14.8"	13.3"	10.0"	19.0"	4.5"	10.0"	19.3"
M78WD	84.0"	83.0"	89.7"	89.1"	112.5"	14.8"	13.3"	10.0"	19.0"	4.5"	10.0"	19.3"

MODELS M68WD AND M78WD							
LIP SIZE (IN.)	"M"						
16"	18.5"						
18"	20.5"						
20"	22.5"						

### PIT LEVELER DIMENSIONS CONTINUED...

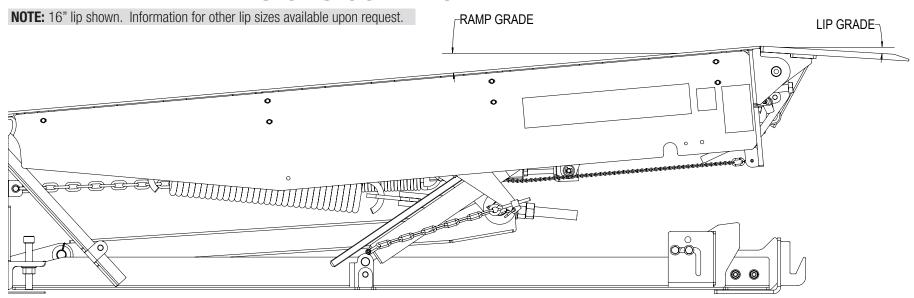

RAMP AND LIP GRADES						
LOADING VEHICLE		RAMP AND LIP GRADE (%)				
FROM DOCK (	(IIV)	RAMP	LIP			
	12	15.37	0.42			
	10	13.25	-1.66			
ABOVE DOCK	8	11.18	-3.70			
ADUVE DUCK	6	9.14	-5.73			
	4	7.08	-7.78			
	2	5.05	-9.82			
LEVEL	0	3.00	-11.89			
	-2	0.98	-13.95			
	-4	-1.05	-16.02			
BELOW DOCK	-6	-3.09	-18.12			
DELUW DUCK	-8	-5.12	-20.22			
	-10	-7.17	-22.35			
	-12	-9.22	-24.51			

Figure 5

### **INSTALLATION INSTRUCTIONS**

#### **Installation Precautions**

### **A** DANGER

READ THESE INSTRUCTIONS CAREFULLY BEFORE ATTEMPTING INSTALLATION. IF YOU ARE IN QUESTION ABOUT ANY OF THE PROCEDURES, DO NOT PERFORM THE WORK. INSTALLATION OR REPAIRS SHOULD ONLY BE PERFORMED BY A TRAINED DOCK LEVELER SYSTEMS TECHNICIAN. FAILURE TO FOLLOW SAFETY INSTRUCTIONS WILL RESULT IN DEATH OR SERIOUS INJURY.

## **A** DANGER

KEEP HANDS, FEET AND OTHER APPENDAGES CLEAR OF HINGES AND OTHER PINCH POINTS WHEN MOVING, INSTALLING, OPERATING, SERVICING, OR OTHERWISE MANIPULATING THE DOCK LEVELING DEVICE. THIS DEVICE IS HEAVY AND MOVES WITH CONSIDERABLE FORCE, CAPABLE OF SEVERING APPENDAGES AND CAUSING SERIOUS INJURY OR DEATH.

## **MARNING**

PROPER INSTALLATION OF THIS DEVICE REQUIRES THE USE OF SPECIAL TOOLS AND TECHNIQUES. ALWAYS USE THE CORRECT TOOLS OR TECHNIQUES WHEN PERFORMING INSTALLATION. FAILURE TO USE PROPER TOOLS OR TECHNIQUES OR ADHERE TO SAFETY MESSAGES, COULD RESULT IN DEATH OR SERIOUS INJURY.

## **A** WARNING

APPROPRIATE PERSONAL PROTECTIVE EQUIPMENT (PPE) SHOULD ALWAYS BE USED. THIS INCLUDES BUT IS NOT LIMITED TO A HARD HAT WHEN WORKING BELOW LEVELER DECK, APPROPRIATE EYE PROTECTION, GLOVES, AND HARD-CAPPED SLIP-RESISTANT FOOTWEAR WHEN WORKING ON OR NEAR THE DOCK AREA. APPROPRIATE PPE MAY PROTECT YOU FROM DEATH OR SERIOUS INJURY.

## NOTICE

INSTALLATION OF THIS DOCK LEVELING DEVICE REQUIRES A MINIMUM OF TWO PEOPLE.

#### **Required Tools And Materials List**

- Lifting equipment (rated to at least 4000 lbs.)
- Fire extinguishers
- Tape measure
- Welder with welding electrode or filler metal (minimum 70,000 PSI tensile strength), E7018 electrode is recommended.
- Wire brush (for cleaning weld slag and concrete splatter)
- Grinder (for removing powder coat before welding)
- Hammer drill with drill bit suitable for concrete. (Be sure to follow anchor manufacturer recommendation for hole diameter)
- Vacuum or compressed air (for concrete anchor hole clean out)

- Prybar (minimum 3 ft long)
- Hammer or mallet (for driving concrete anchors)
- Drill driver with socket adapters (for installing anchors)
- 15" socket extension and a 5/8" hex bit socket (for leveling bolts)
- Calcium sulfonate complex grease
- Touch up paint (please see Replacement Parts.)
- 3/4" Wrench and 3/4" Socket for lip keeper bolts and lip spring bolt.
- 1-1/2" Wrench for main spring adjustment nut

#### PRE-INSTALLATION TASKS

- 1. Ensure a site survey was completed prior to installation.
- 2. Verify embedded curb angles are present.
- 3. Check quality and condition of concrete and steel angles.
- 4. Check size, squareness, and plumbness of the pit. Be sure the pit conforms to the dimensions shown in **Figure 6**.
- 5. Prepare curb angle so it is smooth and clean of all slag and concrete.
- 6. Carefully clean out the pit of all dust and debris.

#### ATTACH LEVELING PLATES

- 1. Locate the two leveling plates in your package.
- 2. Place the leveling plates in the back of the pit, as shown in **Figure 7**.


**NOTE:** To prevent the leveling plates from shifting during installation of the leveler, the leveling plates are to be fastened to the pit floor with an appropriate adhesive.




INSTALLATION OF THIS DOCK LEVELING DEVICE REQUIRES A MINIMUM OF TWO PEOPLE.



PLACE WARNING BARRICADES AROUND THE OUTSIDE OF THE EMPTY PIT, INSIDE AND OUTSIDE THE BUILDING, TO PREVENT INTRUSION DURING INSTALLATION.

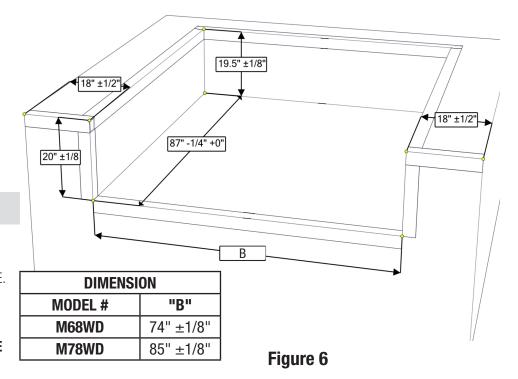

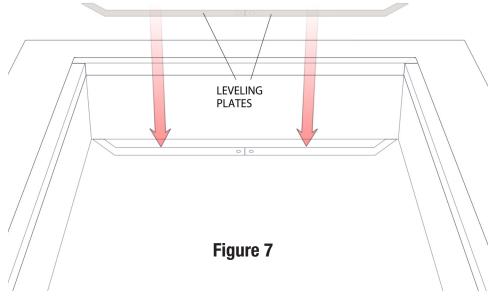

#### LEVELER INSPECTION AND PREPARATION

1. Inspect leveler for damage before unloading.

- **IMPORTANT:** Do not remove shipping clamps until instructed to do so.

  2. Ensure the four deck transportation loops are installed and secure before lifting the leveler from the truck. See **Figure 8**.
- 3. Unbolt the bumpers from the leveler.
- 4. Remove the packaging which is underneath the leveler.

### **NOTICE**

DO NOT OVER-TIGHTEN DECK LOOPS, AS THIS WILL SCRAPE THE POWDER COAT OFF OF THE DOCK LEVELER AND RESTRICT THEIR MOVEMENT WHILE TRANSPORTING THE DOCK.

## **NOTICE**

LIFTING THE LEVELER FROM UNDER THE DECK CAN RESULT IN SERIOUS DAMAGE TO THE LEVELER. ONLY LIFT THE LEVELER USING THE PROVIDED DECK TRANSPORTATION LOOPS. PROPERLY RATED CHAINS OR STRAPS MAY BE USED IN CONJUNCTION WITH THE TRANSPORATION LOOPS.

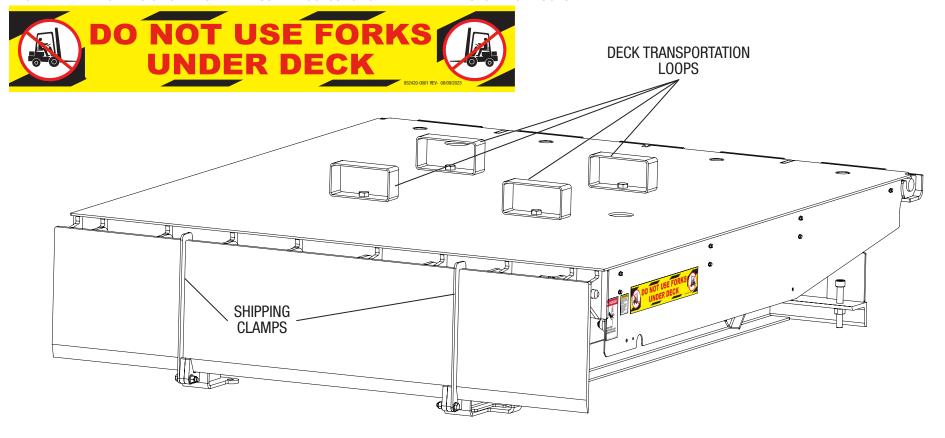


Figure 8

## **A** DANGER

DO NOT ATTEMPT TO MOVE THE LEVELER BY HAND. USE CAUTION WHEN MOV-ING THE LEVELER INTO PLACE. NEVER WORK UNDER A LIFTED LEVELER. BE SURE ALL PERSONNEL ARE CLEAR OF THE INSTALLATION PATH BEFORE YOU BEGIN. ENSURE YOUR LIFTING EQUIPMENT IS RATED TO HANDLE AT LEAST 4000 POUND LOAD WEIGHT AND COMPLIES WITH ALL LIFTING REGULATIONS. FAILURE IN THESE POINTS WILL RESULT IN DEATH OR SERIOUS INJURY.

#### LEVELER INSTALLATION

- 1. Using properly rated lifting equipment lift the leveler using the deck transportation loops and lower it into the pit. See **Figure 9**.
- 2. Prepare weld surface on the aft angle of the leveler.
- 3. Square the leveler in the pit and ensure the gap on each side is equal.


#### LEVELING THE REAR


1. Leveling bolts have been provided in the rear to help adjust the vertical position without shimming. Adjust the leveling bolts until the rear deck of the leveler is even with the warehouse floor. See Figure 10.

**NOTE:** Use a rotary power tool with at least a 15" socket extension and a 5/8" hex bit socket for the leveling bolts. It may be helpful to use tape to attach the socket to the end of the extension to prevent losing the socket under the deck.

**NOTE:** To close any gap observed between the rear embedded curb angle and the top of the leveler frame, slide the leveler fully rearward in the pit by pressing on the front surfaces of the lip keepers with a forklift.

- 2. Check to ensure the leveler is square in the pit front-to-rear. Adjust as needed.
- 3. Tack weld the rear of the leveler to the rear curb angle to hold it in place.
- 4. Remove the shipping clamps and discard.
- 5. Recheck the gap on each side and ensure it is equal. The deck may have shifted to one side when the shipping clamps were removed. Adjust as needed.
- 6. If the pit is not square it may be necessary to add shims between the rear of the leveler and the rear pit curb angle. If this is needed, fill all gaps with weld.

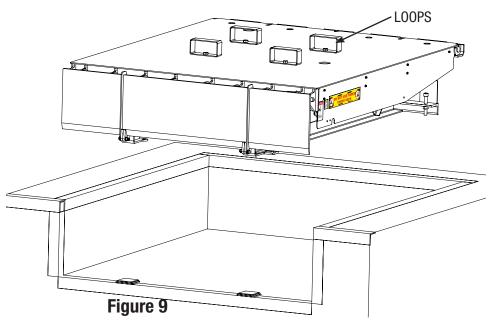

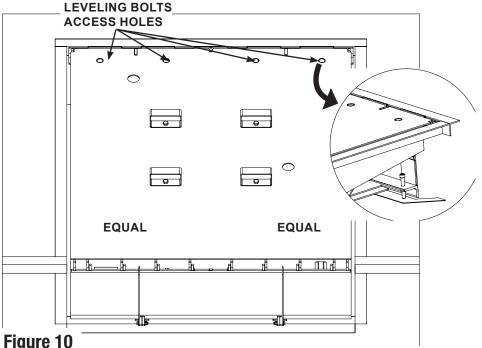

WELD REAR OF LEVELER IN PLACE

1. Remove the paint from the rear of the leveler at the factory cut slots and from the curb angle with an angle grinder or equivalent.

**IMPORTANT:** If applicable, ensure that the Rear Seal (Brush) is removed from leveler prior to welding. Re-install the Rear Seal (Brush) after the welds have cooled.

- 2. Weld leveler to the rear curb angle using the factory cut welding slots, as shown in **Figure 11** and **Figure 12**.
- 3. Set the leveling bolts by turning them clockwise and torque to 40-60 ft. lbs.



ENSURE ALL LEVELING BOLTS ARE CONTACTING THE LEVELING PLATES AND EQUALLY TORQUED DOWN.

OPEN THE LEVELER

1. Pull the release chain and allow the leveler to rise to the fully open position.


## **A** DANGER


DOCK LEVELER SWINGS WITH CONSIDERABLE FORCE. ACTUATING THE DOCK LEVELING DEVICE WITH ANYONE UNDER OR IN FRONT OF IT WILL CAUSE DEATH OR SERIOUS INJURY.


## **A** DANGER

KEEP HANDS, FEET AND OTHER APPENDAGES CLEAR OF HINGES AND OTHER PINCH POINTS WHEN MOVING, INSTALLING, OPERATING, SERVICING, OR OTHERWISE MANIPULATING THE DOCK LEVELING DEVICE. THIS DEVICE IS HEAVY AND MOVES WITH CONSIDERABLE FORCE, CAPABLE OF SEVERING APPENDAGES AND CAUSING SERIOUS INJURY OR DEATH.

 Raise the lip brace and maintenance brace to their vertical and locked positions, as shown in Figure 13.
 Secure it with an 5/8-inch diameter OSHA approved locking device. A secondary means of supporting the

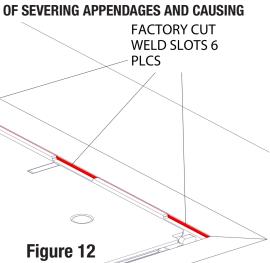

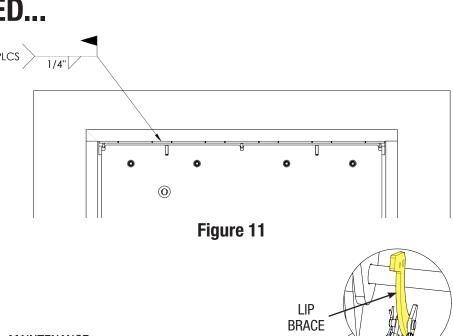

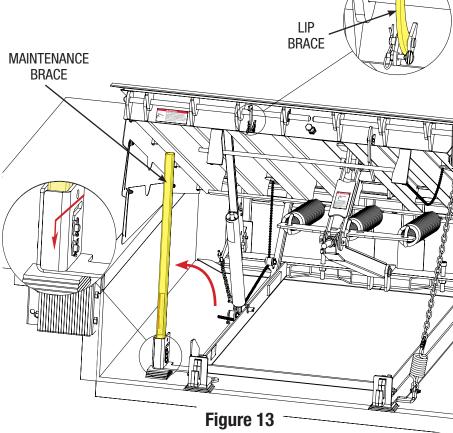

deck should be used.

## **A** DANGER

TO AVOID GETTING IMPACTED BY OR CRUSHED BELOW A FALLING DOCK LEVELER DEVICE, DO NOT WORK UNDERNEATH THE DECK OR LIP UNLESS MAINTENANCE BRACE HAS BEEN SECURED IN THE UPRIGHT POSITION. A SECONDARY MEANS OF SUPPORTING THE DECK SHOULD BE USED. FAILURE TO COMPLY WILL RESULT IN DEATH OR SERIOUS INJURY.

#### WELD FRONT OF LEVELER

1. Shim below lip keepers and maintenance brace, using a prybar to lift the front of the leveler up to insert the shims, as shown in **Figure 14**. The leveler must be shimmed until the front of the deck is level with or just below dock height when the leveler is stowed.

**NOTE:** With standard length lips, the shims beneath the lip keepers may be inserted with the leveler in the stowed position. With extended lips, the leveler must be raised to insert the shims.

## **WARNING**

DO NOT ATTEMPT TO LIFT THE FRONT OF THE LEVELER BY HAND WHEN INSERTING SHIMS BELOW THE LIP KEEPERS AND MAINTENANCE BRACE. LEVELER WEIGHT IS CONSIDERABLE, AND THE LEVELER COULD SHIFT UNEXPECTEDLY. USE A SUFFICIENTLY LONG PRYBAR TO AVOID SEVERING FINGERS. DO NOT ATTEMPT TO LIFT THE LEVELER UPWARD BY THE LIP. THE HOLD DOWN COULD AUTO-RELEASE, COULD RESULT IN DEATH OR SERIOUS INJURY.

2. Ensure lip keeper bolts are fully torqued down.

**NOTE:** For levelers with lip keepers that protrude below the pit floor, slide the lip keepers rearward until the back of each lip keeper hook is flush with the curb steel at the bottom edge of the pit. Weld the back of the hook to the curb steel on both sides.

Shim Stacking Methods	Lip Keepers	Maintenance Brace
Straight	Not Acceptable	Not Acceptable
Stepped	Not Acceptable	Acceptable
Pyramid	Acceptable	Acceptable
Offset	Not Acceptable	Acceptable*

<sup>\*</sup> Acceptable only when load is supported by shims directly beneath it. Do not use overhanging shims to support a load.

3. Weld front frame angle, curb angle, and shims together, as shown in Figure 14.

A. Lower the maintenance brace and walk the leveler down to the closed position.

NOTICE

TO PROMOTE WELD PENETRATION, USE AS FEW AND AS THICK OF SHIMS AS POSSIBLE TO ACHIEVE DESIRED HEIGHT. DO NOT STACK MULTIPLE LAYERS OF THIN GAUGE SHIM. THE TOP SHIM IN THE STACK MUST BE AT LEAST 4" X 4" TO FULLY SUPPORT THE FRAME RAIL.

Figure 14

#### INSTALL LAMINATED BUMPERS

- 1. Bumpers should be installed 46" 52" from the top of the bumper to the ground.
- 2. Installation will be accomplished by a combination of welding and concrete anchors, as shown in **Figure 15** and **Figure 16**.
- 3. Follow concrete anchor manufacturer's instructions for proper use.



DO NOT USE A DOCK LEVELER WITHOUT BUMPERS INSTALLED. TO DO SO COULD RESULT IN DAMAGE TO THE LEVELER OR THE BUILDING.

#### **FINISHING**

- 1. Clean up welds and the surrounding area.
- 2. Apply rust inhibiting touch up paint to all welds and shims as necessary.


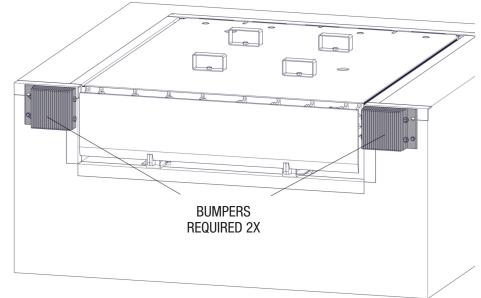


Figure 15

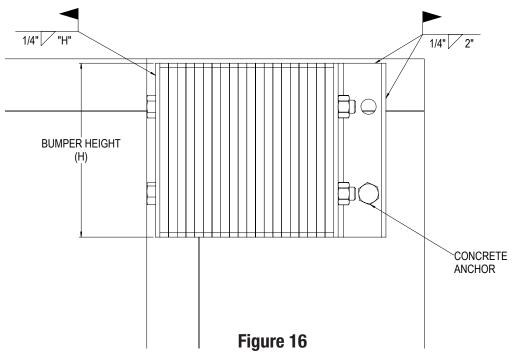

- 3. Remove the four deck transportation loops, as shown in **Figure 17**.
- 4. Locate the eight deck plugs in the hardware bag. Insert them in the four holes where the deck transportation loops were bolted and the four holes for accessing the rear leveling bolts, as shown in **Figure 18**. Ensure they are pushed all the way down below the top surface of the deck in order to prevent damage.
- 5. Be sure all tools and debris are removed from the leveler and the surrounding area.


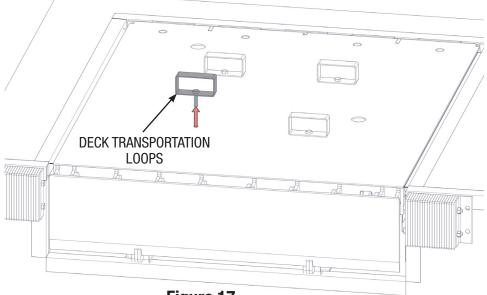


Figure 17

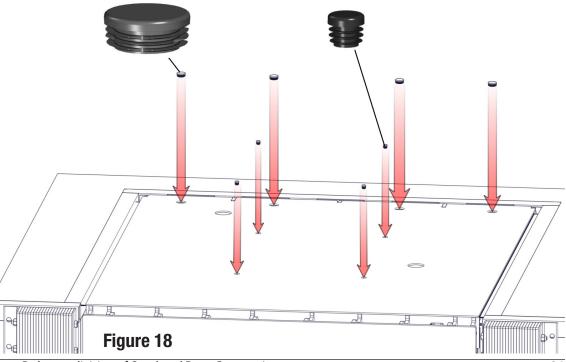

#### INSTALL OPERATION PLACARD

1. Install operation placard on the wall near the opening in plain view of the dock leveler with an appropriate adhesive or fasteners. See **Figure 19**.

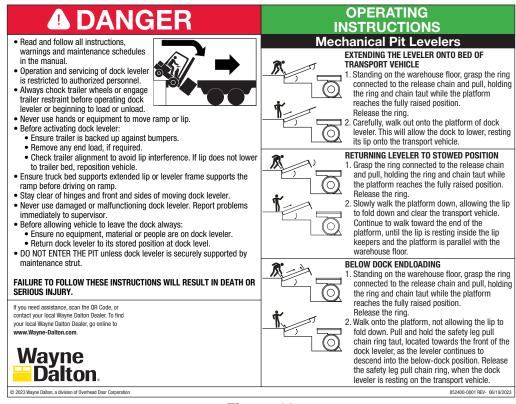


Figure 19

### **TESTING AND SPRING ADJUSTMENTS**

## **A** DANGER


DOCK LEVELER SWINGS WITH CONSIDERABLE FORCE. ACTUATING THE DOCK LEVELING DEVICE WITH ANYONE UNDER OR IN FRONT OF IT WILL CAUSE DEATH OR **SERIOUS INJURY.** 

## **DANGER**

KEEP HANDS, FEET AND OTHER APPENDAGES CLEAR OF HINGES AND OTHER PINCH POINTS WHEN MOVING, INSTALLING, OPERATING, SERVICING, OR OTHERWISE MANIPULATING THE DOCK LEVELING DEVICE. THIS DEVICE IS HEAVY AND MOVES WITH CONSIDERABLE FORCE, CAPABLE OF SEVERING APPENDAGES AND CAUSING SERIOUS INJURY OR DEATH.

## **DANGER**

DO NOT WORK UNDER DOCK LEVELER UNLESS MAINTENANCE BRACE HAS BEEN SECURED IN THE UPRIGHT POSITION. FAILURE TO COMPLY WILL RESULT IN DEATH OR SERIOUS INJURY.

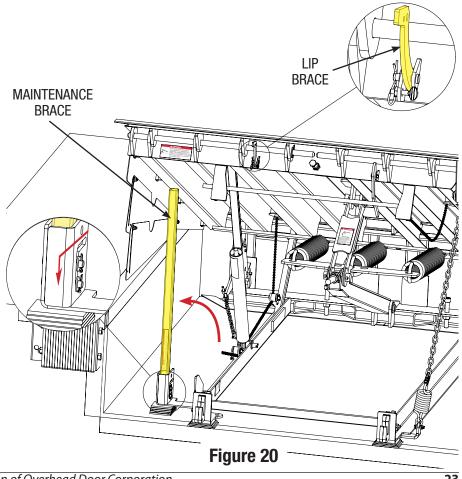

### **TESTING AND SPRING ADJUSTMENTS CONTINUED...**

## **A** DANGER

THE ADJUSTMENT OF PIT LEVELER SPRINGS SHALL BE PERFORMED BY TRAINED DOCK SYSTEM TECHNICIANS ONLY. DO NOT ATTEMPT TO REMOVE SPRINGS UNTIL THE TENSION IS COMPLETELY AND PROPERLY REMOVED. SPRINGS CAN UNEXPECTEDLY RELEASE HIGH POTENTIAL ENERGY WHICH COULD CAUSE DEATH OR SERIOUS INJURY.

## **A** DANGER

SECURELY SUPPORT RAMP AND LIP WHILE WORKING BELOW THE LEVELER PLATFORM. FAILURE TO USE PROPER BRACING WILL RESULT IN DEATH OR SERIOUS INJURY DUE TO RAMP DROPPING.



A SECONDARY MEANS OF SUPPORTING THE RAMP AND LIP SHOULD BE USED. FAILURE TO FOLLOW THESE PRECAUTIONS MAY RESULT IN DEATH OR SERIOUS INJURY.

## **WARNING**

PRIOR TO SERVICING, ALWAYS BARRICADE OR PLACE TRAFFIC CONES ON ALL SIDES OF THE LEVELER TO ALERT FORK VEHICLE OPERATORS AND PEDESTRIANS THAT A SERVICE TECHNICIAN MAY BE WORKING BELOW THE DOCK. NOTIFY A SUPERVISOR/FOREMAN PRIOR TO BEGINNING WORK. COMPLY WITH ALL OSHA STANDARDS AND REGULATIONS.

## **WARNING**

APPROPRIATE PERSONAL PROTECTIVE EQUIPMENT (PPE) SHOULD ALWAYS BE USED. THIS INCLUDES BUT IS NOT LIMITED TO A HARD HAT WHEN WORKING BELOW LEVELER DECK, APPROPRIATE EYE PROTECTION, GLOVES, AND HARD-CAPPED SLIP-RESISTANT FOOTWEAR WHEN WORKING ON OR NEAR THE DOCK AREA.

After the mechanical pit leveler is welded in place, the springs should be adjusted to ensure optimal functionality. The following procedure is designed to minimize the time required to achieve the ideal spring settings.

- 1. Cycle the unit a few times to check operations and functions of the unit.
- 2. Raise the deck and lip to their highest position and engage the deck and lip maintenance braces. Verify all hinge and pivot points are properly lubricated per the Preventative Maintenance section.
- 3. Disengage and stow both maintenance braces.
- 4. Bring the unit to six (6) inches above dock level. Extend the lip fully. Time the lip as it falls to pendant position. The fall time should be between 12 to 18 seconds. If the time is achieved go to STEP 6. If not continue to next step.

### **TESTING AND SPRING ADJUSTMENTS CONTINUED...**

- 5. Brace the deck in its uppermost position and adjust the lip actuation spring: loosen up the jam-nut and firmly grasp the square adjustment tube by hand or with a wrench and turn the lip spring adjustment bolt (see **Figure 21**). Clockwise to tighten, counterclockwise to remove tension. Tighten the jam-nut once proper setting is achieved.

  Retest STEP 4.
- 6. Once the lip is properly adjusted, adjust the main spring tension so that the lip fully extends when pulling the hold down release chain from the leveler stowed position. The lip should have a "snap" to it when the unit fully opens. This will require several attempts, alternating between adjusting the main spring tension and checking if the lip is deploying, and is more easily achieved with two people.
  - a) To adjust the main spring tension, loosen up the jam-nut and turn the adjustment nut on the scissor mechanism as shown in **Figure 22**. Clockwise to tighten, counterclockwise to remove tension. Tighten the jam-nut once proper setting is achieved.


### **A** DANGER

ENSURE THE SPRINGS ARE NOT OVERTIGHTENED. ATTEMPTING TO FORCE THE LEVELER DOWN WHEN SPRINGS ARE OVERTIGHTENED COULD CAUSE THE SPRINGS TO BREAK. CAUSING UNCONTROLLED RAPID DESCENT. FAILURE TO ENSURE PROPER SPRING ADJUSTMENT WILL RESULT IN DEATH OR SERIOUS INJURY.

### **A** DANGER

ENSURE THE SPRINGS ARE NOT UNDERTIGHTENED. DECK COULD DROP UNCONTROLLABLY WITH INSUFFICIENT SPRING TENSION. ENSURE THE UNDERSIDE OF THE LEVELER DECK IS NOT CONTACTING THE MAINTENANCE BRACE BEFORE REMOVING BRACING. REMOVING THE BRACING WHEN IT IS CONTACTING THE UNDERSIDE OF THE DECK WILL RESULT IN DEATH OR SERIOUS INJURY.

**IMPORTANT:** Excessive tension on the main springs will make the leveler difficult to walk down. Too little tension may prevent the lip from deploying properly. A quarter turn of the adjustment nut can make a substantial difference.

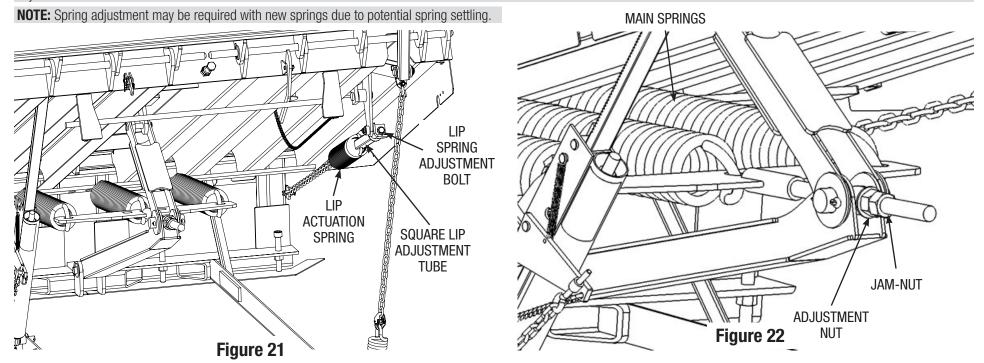

### **TROUBLESHOOTING**

# PIT LEVELER INSPECTION AND TROUBLESHOOTING SHALL BE PERFORMED BY TRAINED DOCK SYSTEM TECHNICIANS ONLY.

	TROUBLESHOOTING: SYMPTOMS, CAUSES AND SOLUTIONS							
SYMPTOM	POTENTIAL CAUSE	SOLUTION						
	Pit is not square	Use vertical shims along the rear curb angle to square off the rear pit wall						
Dock leveler rubs vertical pit walls	Leveler not welded flush to rear curb angle	Remove leveler, clean rear curb angle from slag/de- bris, verify squareness of pit, then reinstall leveler						
	Toe guard loose	Fasten toe guards securely						
	Pit too small for leveler	Contact factory						
	Shipping clamps not removed	Remove shipping clamps						
	Weight on deck surface	Remove weight from deck. Do not stand on deck when pulling hold down release chain						
	Debris in rear hinge	Clean out rear hinge using broom and/or compressed air						
	Dock leveler obstructed by pit walls	Refer to symptom, "Dock leveler rubs vertical pit walls"						
	Transport vehicle obstructs pit leveler	Move transport vehicle. Check bumpers for excessive wear. If bumpers are not worn, consult factory						
	Snubber chain snagged	Unsnag snubber chain from obstruction, including the snubber spring						
Dock leveler deck does not rise properly	Main spring(s) is/are broken or worn	Replace damaged spring(s)						
	Springs have too little tension	Adjust springs per Mechanical Pit Leveler Adjustments section						
	Scissor mechanism seized/broken	Lubricate per Periodic Maintenance, repair and/or replace scissor mechanism, as needed						
	Rear hinge seized	Lubricate rear hinge shaft per Periodic Maintenance						
	Hold down chain stuck/broken	Unsnag hold down chain or replace, as needed						
	Hold down pawl stuck	Lubricate pawl pins or replace, as needed. DO NOT LUBRICATE RATCHET TEETH						
	Snubber chain is too short	Verify snubber chain length per replacement part table and replace if needed						
	Deck is obstructed	Remove all foreign obstructions						

## TROUBLESHOOTING CONTINUED...

	TROUBLESHOOTING: SYMPTOMS, CAUSES AND SOLUTIONS							
SYMPTOM	POTENTIAL CAUSE	SOLUTION						
	Debris in rear hinge	Clean out rear hinge using broom and/or compressed air						
	Maintenance brace is deployed	Stow maintenance brace						
	Main springs have too much tension	Adjust springs per Mechanical Pit Leveler Adjust- ments section						
Deck does not stow properly	Obstruction under deck	Remove all foreign obstructions from below deck						
	Scissor mechanism seized/broken	Lubricate per Periodic Maintenance, repair and/or replace scissor mechanism, as needed						
	Lip keepers are out of place, missing, or damaged	Verify lip keepers are and welded in the correctly position						
	Hold down is broken/seized	Replace hold down						
	Springs improperly set	Adjust springs per Mechanical Pit Leveler Adjustments section						
	Lip actuation linkage is corroded or seized	Lubricate, repair, and replace as needed						
	Lip damper damaged/broken	Remove damper and ensure it can be compressed manually. Replace damper if it does not compress manually						
Lip does not deploy or drop properly	Transport vehicle obstructs pit leveler lip	Move transport vehicle. Check bumpers for excessive wear. If bumpers are not worn, consult factory						
Lip does not deploy of drop property	Lip is damaged/bowed	Consult factory						
	Lip hinge shafts are worn through or seized	Replace shafts, as needed						
	Lip spring is damaged or broken	Replace lip spring						
	Lip actuation chain is snagged	Ensure lip chain is not caught						
	Lip actuation chain	Verify lip actuation chain length per replacement part table and fix/replace, as needed						
	Lip maintenance brace is deployed	Stow lip maintenance brace						
	Lip actuation linkage is bent/damaged	Replace linkage parts, as needed						

## TROUBLESHOOTING CONTINUED...

TROUBLESHOOTING: SYMPTOMS, CAUSES AND SOLUTIONS							
SYMPTOM	POTENTIAL CAUSE	SOLUTION					
	Safety leg chain is snagged/broken	Free safety leg chain or replace as needed					
Safaty loge not retracting/deploying	Safety leg spring is broken	Replace safety leg spring					
Safety legs not retracting/deploying	Safety leg parts missing or broken	Replace/repair, as needed					
	Lip keepers set incorrectly	Ensure lip keepers are aligned below safety legs					
Weld to rear curb angle is broken/cracked	Leveling bolts are not contacting the pit floor	Extend all leveling bolts per installation instructions. Repair weld					
Leveler is broken/cracked	Load exceeded manufacturer factored load limit	Document with installer and repair/replace per					
Levelet is broker/cracked	Driving too fast over leveler	manufacturer instruction					
	Harsh chemicals used	Clean surface and reapply touchup paint					
Painted areas flaking/wearing	Too thin of a touchup paint coat applied						
	Dirty surface prior to field paint						
Chipped or cracked powder coating	Bent or broken equipment	Inspect and replace/touch up, as needed					
	Bumpers are worn	Replace worn bumpers					
Lip does not clear transport vehicle	Drive grade is incompatible with bumper projection and lip length	Replace with compatible bumper projection					
Pallet jack or loading vehicle scrapes against leveler	Pallet jack is too low	Raise pallet jack to max height					
platform	Transport vehicle is too high or dock is too low	Consult factory					

### **MAINTENANCE**



READ THESE INSTRUCTIONS CAREFULLY BEFORE ATTEMPTING MAINTENANCE. IF YOU ARE IN QUESTION ABOUT ANY OF THE PROCEDURES, DO NOT PERFORM THE WORK. REPAIRS SHOULD ONLY BE PERFORMED BY A TRAINED DOCK LEVELER SYSTEMS TECHNICIAN. FAILURE TO FOLLOW SAFETY INSTRUCTIONS WILL RESULT IN DEATH OR SERIOUS INJURY.



DO NOT WORK UNDER DOCK LEVELER UNLESS MAINTENANCE BRACE HAS BEEN SECURED IN THE RAISED SERVICE POSITION. SECURELY SUPPORT RAMP AND LIP WITH MAINTENANCE BRACES WHEN RAMP IS IN RAISED SERVICE POSITION. A SECONDARY MEANS OF SUPPORTING THE RAMP AND LIP SHOULD BE USED. FAILURE TO USE PROPER BRACING WILL RESULT IN DEATH OR SERIOUS INJURY.

## **A** DANGER

NEVER ATTEMPT TO ADJUST THE ENCLOSED COMPRESSION SPRING IN THE HOLD DOWN MECHANISM. THIS SPRINGS CAN UNEXPECTEDLY RELEASE HIGH POTENTIAL ENERGY WHICH COULD CAUSE DEATH OR SERIOUS INJURY.

## **A** DANGER

PRIOR TO SERVICING, ALWAYS BARRICADE OR PLACE TRAFFIC CONES ON ALL SIDES OF THE LEVELER TO ALERT FORK VEHICLE OPERATORS AND PEDESTRIANS THAT A SERVICE TECHNICIAN MAY BE WORKING BELOW THE DOCK. NOTIFY A SUPERVISOR/FOREMAN PRIOR TO BEGINNING WORK. COMPLY WITH ALL OSHA STANDARDS AND REGULATIONS.

## **WARNING**

APPROPRIATE PERSONAL PROTECTIVE EQUIPMENT (PPE) SHOULD ALWAYS BE USED. THIS INCLUDES BUT IS NOT LIMITED TO: A HARD HAT WHEN WORKING BELOW LEVELER DECK, EYE PROTECTION, GLOVES, AND HARD-CAPPED SLIP-RESISTANT FOOTWEAR WHEN WORKING ON OR NEAR THE DOCK AREA. FAILURE TO USE APPROPRIATE PPE COULD RESULT IN SEVERE OR FATAL INJURY.

Before starting repair or inspection of a dock leveler device:

- a) Secure and restrict access in and around the dock position (dock and driveway) with physical barriers and visible signage.
- b) Read, understand, and follow all maintenance instructions and precautions provided.
- c) Remove all loads from the platform; and
- d) Disconnect power and follow established OSHA-approved lockout / tag-out policies as required.

Maintenance and inspection of all dock leveling devices shall be performed in conformance with the following practices:

- a) Scheduled, planned maintenance program shall be followed and logged.
- b) Only trained and authorized personnel shall be permitted to maintain, repair, adjust, and inspect dock leveling devices.
- c) Use only original equipment manufacturer parts, manuals, maintenance instructions and labels.

### **MAINTENANCE CONTINUED...**

#### **Daily Maintenance**

At the beginning of each shift and before operation of the dock leveling device, the operator shall inspect the condition of the dock leveling device, giving special attention to the following:

- 1. Ensure hinges and surfaces are free of debris, ice, dirt, or obstruction.
- 2. Verify all precautionary labeling and operation placards are intact, visible, and legible.
- 3. If leveler has guards or safety devices, ensure they are present and functional.
- 4. Perform a function check to ensure controls are fully operational.
- 5. Inspect that unit is free of visible structural defect or damage.

#### **Weekly Maintenance**

- 1. Cycle the dock leveler through at least one complete operating cycle to maintain lubrication.
  - a) Observe for imbalance. If leveler is sluggish, heavy or binds, the lip does not deploy with a snap, or cannot be walked down, call authorized, trained personnel to adjust the springs and inspect the unit.
- 2. Check bumpers for wear. If the leveler begins to interfere with the transport vehicle during deployment or stowing, it is time to replace the bumpers.
- 3. Clean dock leveler with warm soapy water.

**NOTE:** Sodium hydroxide cleaning solution may be used if it is diluted to <5% and completely rinsed clean within 3 minutes. Ensure lubrication is not washed off.

#### **Quarterly Maintenance**


1. Lubricate the following areas with calcium sulfonate complex grease or other long-lasting, weather & pressure resistant, anti-seize, penetrating, lubricating oil/grease. See **Figure 23**:

- a) All lip actuation linkage joints
- b) Lug hinge contact surfaces.
- c) Scissor mechanism pins.
- d) Rear hinge shaft



NEVER LUBRICATE THE RATCHET OR PAWL TEETH ON THE HOLD DOWN SYSTEM. THE FLAT BACKSIDE OF THE RATCHET BAR MAY BE LUBRICATED WITH A NON-RUNNING GREASE.

- 2. Clean out rear hinge with broom or compressed air.
- 3. Inspect welds and structure for cracks, separation or other damage. Repair field welds and replace damaged components, as appropriate.
  - a) Inspect welds between the leveler and the rear pit curb angle.
  - b) Inspect structural welds below leveler lip.
  - c) Inspect welds of bumpers to dock structure.
  - d) Inspect hinge and pivot pins for wear.
- 4. Perform Weekly Maintenance
- 5. Tune the spring for easy, smooth operation
- 6. Check wall anchors/anchor nuts for tightness.

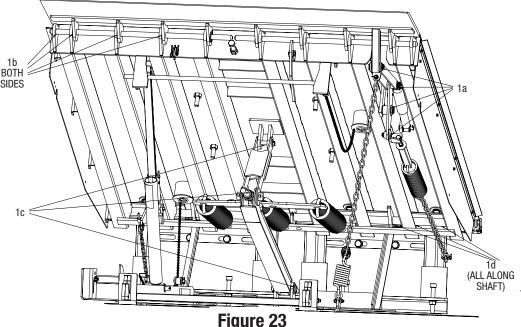

### **MAINTENANCE CONTINUED...**

#### LOCKOUT/TAGOUT

Occupational Safety and Health Administration (OSHA) rules and regulations require all affected employees be notified when equipment is shut down/locked out for repair and/or maintenance work.

- a) Utilize OSHA-approved lockout devices.
- b) The tagout tags indicating that work is being done on equipment should be prominently visible and clearly bear the name of the authorized person responsible for the lockout.
- c) Tagout notices shall not be susceptible to deterioration or become illegible due to environmental conditions or chemical exposure.
- d) Always follow local, state, and federal codes.
- e) Always lockout and tagout power sources prior to beginning work on electrical devices/controls.

#### **CONFINED SPACE**

If a confined space entry associated with operations or maintenance of a dock leveling device is required, the confined space procedures shall comply with ANSI/ASSP Z117.1.

### **REPLACEMENT PARTS**


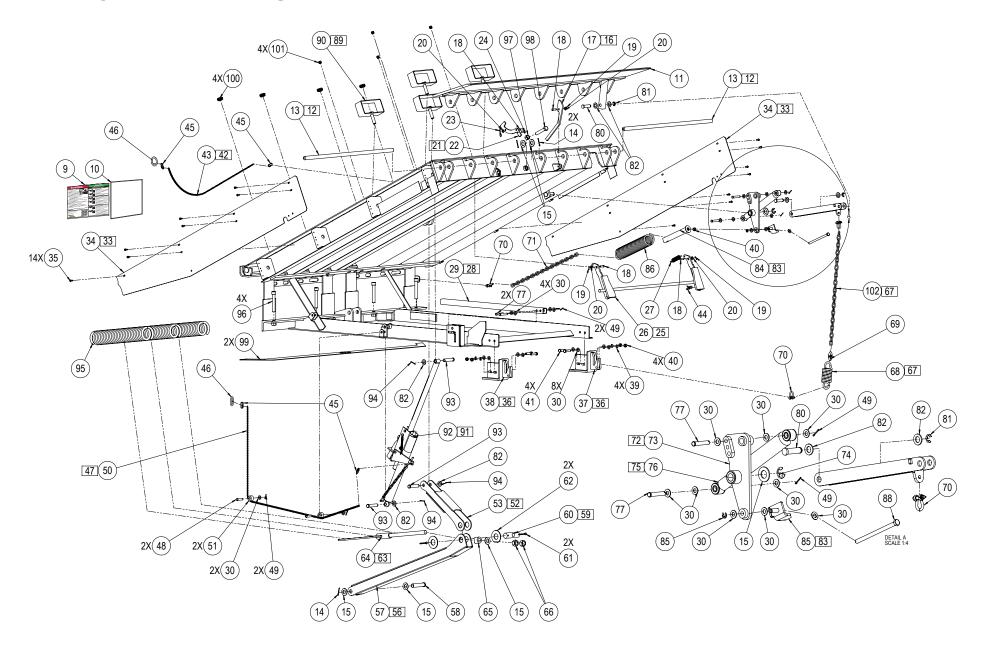


Figure 24

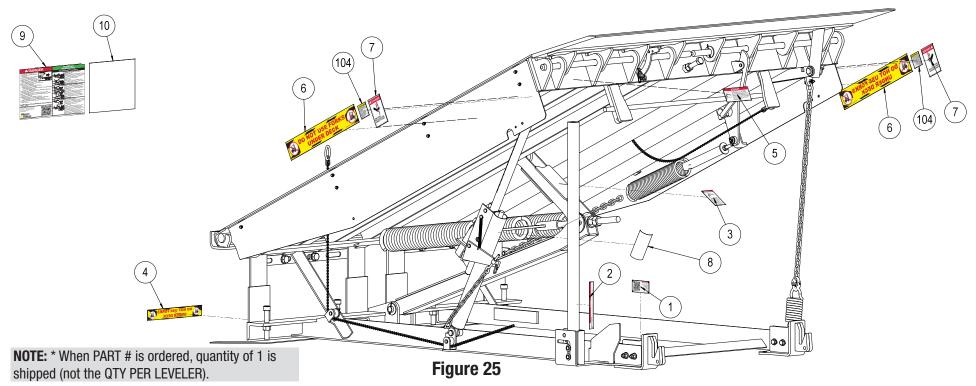

	SERVICE PARTS LISTS								
ITEM #	MODEL #	CAPACITY (CIR) (POUNDS)	LIP SIZE (INCHES)	PART #	PART DESCRIPTION	QTY PER LEVELER			
1				CALL SERVICE	SERIAL# & MODEL TAG	1			
2				852402.xxxx	LABEL, CRUSH HAZARD, STRUT, MPL	1			
3				852403.xxxx	LABEL, CRUSH HAZARD, SPRING, MPL	1			
4				852404.xxxx	LABEL, CAUTION, FORKS, DO NOT USE, MPL	1			
5	MCOMD /			852405.xxxx	LABEL, CRUSH HAZARD, PIT, MPL	1			
6	M68WD / M78WD	ALL	ALL	852420.xxxx*	LABEL, CAUTION, FORKS, DO NOT USE, LG, MPL	2			
7	IVITOVVD			852421.xxxx*	LABEL, DANGER, PINCH POINT, MPL	2			
8				852406.xxxx	LABEL, SPRING, STORED ENERGY, MPL	1			
9				852400.xxxx	OPERATING INSTRUCTIONS AND DANGER PLACARD, MPL	1			
10						852410.xxxx	MANUAL, OPERATION AND INSTALLATION	1	
104				361553*	LABEL, PROP65	2			


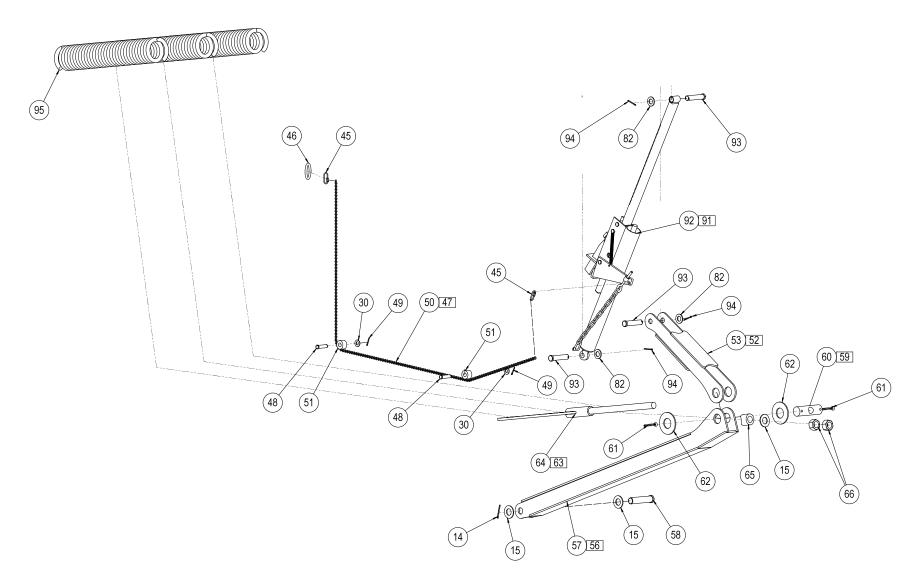


Figure 26

	SERVICE PARTS LISTS							
ITEM #	MODEL #	CAPACITY (CIR) (POUNDS)	LIP SIZE (INCHES)	PART #	PART DESCRIPTION	QTY PER LEVELER		
47					REPLACEMENT HOLD DOWN PULL CHAIN W/ HARDWARE KIT			
48					PIN, CLEVIS, PLATED	2		
49					PIN, COTTER, PLATED	2		
30	ALL	ALL	ALL	050500 0011	FLAT WASHER, PLATED	2		
50	ALL	ALL	ALL	852500.0011	CHAIN, TWISTED LINK	1		
45					LINK, THREADED CONNECTING, PLATED	2		
46					RING, STAINLESS	1		
51					ROLLER, PLASTIC	2		
						•		
52					REPLACEMENT UPPER SCISSOR LINKAGE W/ HARDWARE KIT			
53					UPPER SCISSOR ARM	1		
93	ALL	ALL ALL	050500 0010	PIN, CLEVIS, PLATED	1			
94	ALL	ALL	ALL	852500.0012	PIN, COTTER, PLATED	1		
82					FLAT WASHER, PLATED	1		
3					LABEL, CRUSH HAZARD, SPRING, MPL	1		
56					REPLACEMENT LOWER SCISSOR LINKAGE W/ HARDWARE KIT			
57					LOWER SCISSOR ARM	1		
58	ALL	ALL	ALL	852500.0013	PIN, CLEVIS, PLATED	1		
14					PIN, COTTER, PLATED	1		
15					FLAT WASHER, PLATED	2		
59					REPLACEMENT SCISSOR LINKAGE CONNECTING PIN W/ HARDWARE KIT			
60	ALL	ALL	ALL	852500.0014	PIN, PIVOT, PLATED	1		
61					PIN, COTTER, PLATED	2		
62					FLAT WASHER, PLATED	2		


	SERVICE PARTS LISTS								
ITEM #	MODEL #	CAPACITY (CIR) (POUNDS)	LIP SIZE (INCHES)	PART #	PART DESCRIPTION	QTY PER LEVELER			
63					REPLACEMENT WINGPLATE W/ HARDWARE KIT				
64					WING, SPRING ADJUSTMENT	1			
65	ALL	ALL	ALL	852500.0015	SPACER, SADDLE, PLATED	1			
15					FLAT WASHER, PLATED	1			
66					NUT, HEX, PLATED	2			
91					HOLD DOWN W/ HARDWARE KIT				
92					HOLD DOWN ASSEMBLY, AUTO-RELEASE	1			
93	ALL	ALL	ALL	852500.0022	PIN, CLEVIS, PLATED	2			
94					PIN, COTTER, PLATED	2			
82								FLAT WASHER, PLATED	2
		30K / 35K		852264.0001*	SPRING, MAIN ACTUATION, RED	3			
	M68WD	40K / 45K		852264.0001*	SPRING, MAIN ACTUATION, RED	2			
95		40K / 45K	ALL	852265.0001*	SPRING, MAIN ACTUATION, YELLOW	2			
95		30K / 35K	ALL	852264.0001*	SPRING, MAIN ACTUATION, RED	2			
	M78WD	30K / 33K		852265.0001*	SPRING, MAIN ACTUATION, YELLOW	2			
		40K / 45K		852264.0001*	SPRING, MAIN ACTUATION, RED	4			

**NOTE:** \* When PART # is ordered, quantity of 1 is shipped (not the QTY PER LEVELER).

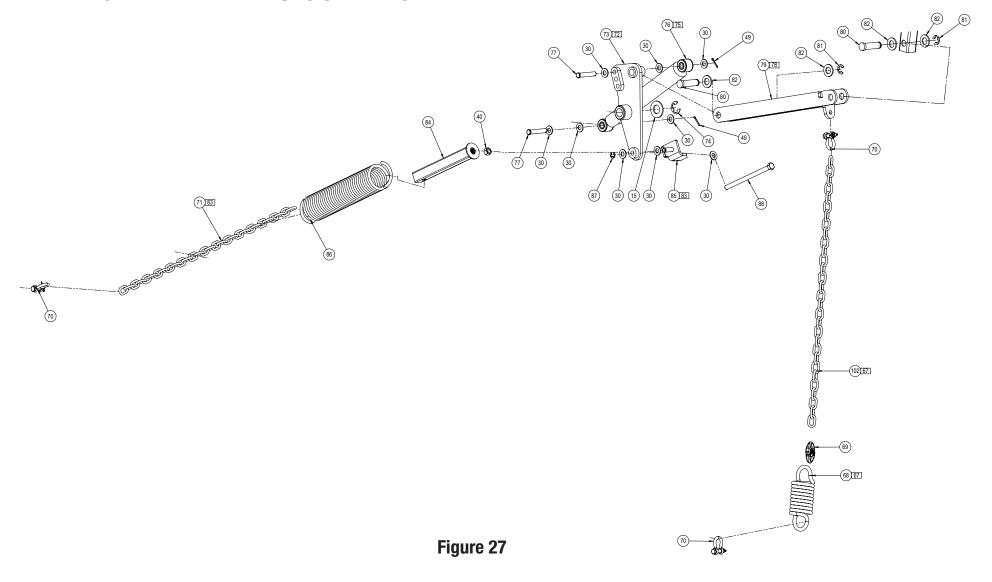


				SEF	RVICE PARTS LISTS	
ITEM #	MODEL #	CAPACITY (CIR) (POUNDS)	LIP SIZE (INCHES)	PART #	PART DESCRIPTION	QTY PER LEVELER
67					REPLACEMENT SNUBBER CHAIN & SPRING W/ HARDWARE KIT	
68	A	A		050500 0010	SPRING, SNUBBER	1
69	ALL	ALL	ALL	852500.0016	LINK,HAMMER	1
70					SHACKLE, GALV	2
102					CHAIN, SNUBBER, PLATED, .25IN THICK	1
72					REPLACEMENT LIP ACTUATION PIVOT W/ HARDWARE KIT	
73	ALL	ALL	ALL	852500.0017	PIVOT, LIP ACTUATION	1
74	ALL	ALL	ALL	032300.0017	RING, RETAINING	1
15					FLAT WASHER, PLATED	1
			,			_
75					REPLACEMENT LIP ACTUATION DAMPER W/ HARDWARE KIT	
76					DAMPER, HYDRAULIC	1
77	ALL	ALL	ALL	852500.0018	PIN, CLEVIS, PLATED	2
49					PIN, COTTER, PLATED	2
30					FLAT WASHER, PLATED	6
			,			_
78					REPLACEMENT LIP ACTUATION PIVOT LINKAGE W/ HARD- WARE KIT	
79		ALL		050500 0010	LINK, LIP ACTUATION	1
80	ALL	ALL	ALL	852500.0019	PIN, CLEVIS, PLATED	2
81					RING, RETAINING	2
82					FLAT WASHER, PLATED	4

				SEF	RVICE PARTS LISTS	
ITEM #	MODEL #	CAPACITY (CIR) (POUNDS)	LIP SIZE (INCHES)	PART #	PART DESCRIPTION	QTY PER LEVELER
83					REPLACEMENT LIP ACTUATION SPRING LINKAGE W/ HARDWARE KIT	
84					TUBE, SPRING ADJUSTMENT	1
85					BRACKET, SPRING ADJUSTMENT PIVOT	1
87	] ,,,	A. I.		050500 0000	RING, RETAINING	1
30	ALL	ALL	ALL	852500.0020	FLAT WASHER, PLATED	3
40	]				NUT, HEX, PLATED	1
88	]				BOLT, HEX, PLATED	1
70	]				SHACKLE, GALV	1
71	]				CHAIN, LIP ACTUATION, PLATED	1
			•			
			16"	852251.0001*	SPRING, LIP ACTUATION, BLUE	1
	M68WD	ALL	18"	852252.0001*	SPRING, LIP ACTUATION, GREEN	1
			20"	852253.0001*	SPRING, LIP ACTUATION, PURPLE	1
			16"	852251.0001*	SPRING, LIP ACTUATION, BLUE	1
86		30K / 35K	18"	852252.0001*	SPRING, LIP ACTUATION, GREEN	1
	MZOWD		20"	852253.0001*	SPRING, LIP ACTUATION, PURPLE	1
	M78WD		16"	852252.0001*	SPRING, LIP ACTUATION, GREEN	1
		40K / 45K	18"	852253.0001*	SPRING, LIP ACTUATION, PURPLE	1
			20"	852253.0001*	SPRING, LIP ACTUATION, PURPLE	1

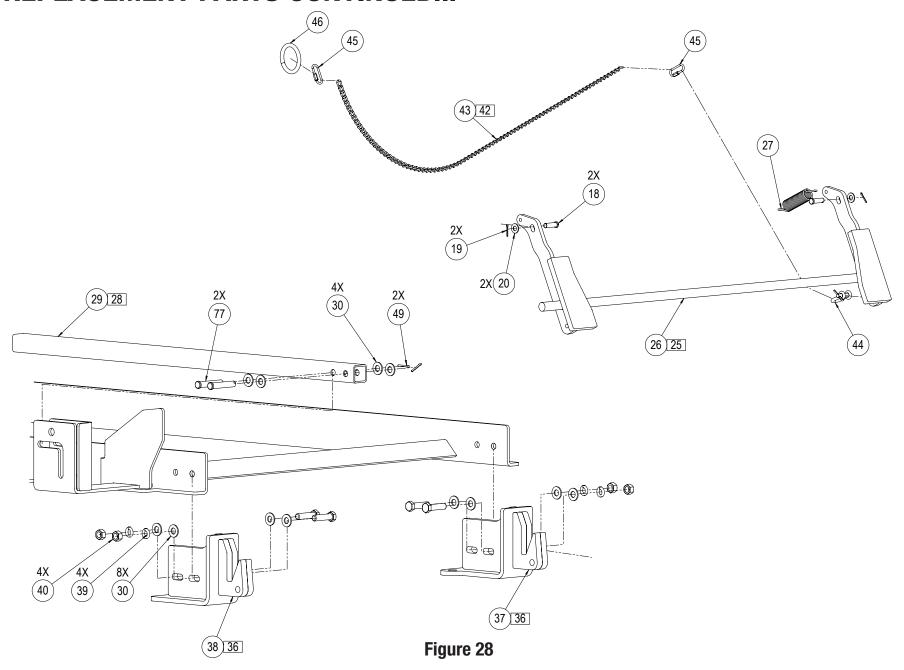

				SEF	RVICE PARTS LISTS	
ITEM #	MODEL #	CAPACITY (CIR) (POUNDS)	LIP SIZE (INCHES)	PART #	PART DESCRIPTION	QTY PER LEVELER
25					REPLACEMENT SAFETY LEG ASSY, W/HARDWARE KIT	
26					SAFETY LEGS	1
27	ALL	ALL	ALL	852500.0004	SPRING, EXTENSION	1
18	ALL	ALL	ALL	002000.0004	PIN, CLEVIS, PLATED	2
19					PIN, COTTER, PLATED	2
20					FLAT WASHER, PLATED	2
28					REPLACEMENT MAINTENANCE BRACE W/ HARDWARE KIT	
29					MAINTENANCE BRACE	1
30	ALL	ALL	ALL	852500.0005	FLAT WASHER, PLATED	4
49	ALL	ALL	ALL	032300.0003	PIN, COTTER, PLATED	2
77					PIN, CLEVIS, PLATED	2
2					LABEL, CRUSH HAZARD, STRUT, MPL	1
36					REPLACEMENT LIP KEEPERS, 16IN LIP W/ HARDWARE KIT	
37	]				LIP KEEPER, 16IN LIP, RH	1
38					LIP KEEPER, 16IN LIP, LH	1
30	ALL	ALL	16"	852500.0007	FLAT WASHER, PLATED	8
39	]				SPLIT WASHER, PLATED	4
40	]				NUT, HEX, PLATED	4
41					BOLT, HEX, PLATED	4

	1			SEF	RVICE PARTS LISTS	
ITEM #	MODEL #	CAPACITY (CIR) (POUNDS)	LIP SIZE (INCHES)	PART #	PART DESCRIPTION	QTY PER LEVELER
36					REPLACEMENT LIP KEEPERS, 18IN LIP W/ HARDWARE KIT	
37	]				LIP KEEPER, 18IN LIP, RH	1
38					LIP KEEPER, 18IN LIP, LH	1
30	ALL	ALL	18"	852500.0008	FLAT WASHER, PLATED	8
39					SPLIT WASHER, PLATED	4
40	]				NUT, HEX, PLATED	4
41					BOLT, HEX, PLATED	4
36					REPLACEMENT LIP KEEPERS, 20IN LIP W/ HARDWARE KIT	
37					LIP KEEPER, 20IN LIP, RH	1
38					LIP KEEPER, 20IN LIP, LH	1
30	ALL	ALL	20"	852500.0009	FLAT WASHER, PLATED	8
39					SPLIT WASHER, PLATED	4
40					NUT, HEX, PLATED	4
41					BOLT, HEX, PLATED	4
42					REPLACEMENT SAFETY LEG PULL CHAIN W/ HARDWARE KIT	
43	]				CHAIN, TWISTED LINK	1
44	ALL	ALL	ALL	852500.0010	SHACKLE, GALV	1
45	]				LINK, THREADED CONNECTING, PLATED	2
46					RING	1

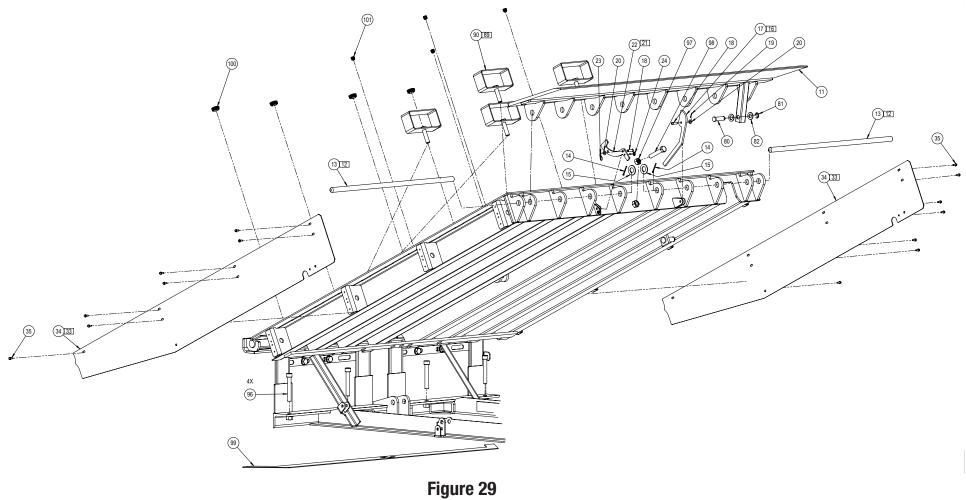

				SER	VICE PARTS LISTS	
ITEM #	MODEL#	CAPACITY (CIR) (POUNDS)	LIP SIZE (INCHES)	PART #	PART DESCRIPTION	QTY PER LEVELER
			16"	852050.10721601	LIP, 16"L,72"W,30K,NO TAPER	
		30K	18"	852050.10721801	LIP, 18"L,72"W,30K,NO TAPER	
			20"	852050.10722001	LIP, 20"L,72"W,30K,NO TAPER	]
			16"	852050.1072160	LIP, 16"L,72"W,35K,NO TAPER	]
	M68WD	35K	18"	852050.1072180	LIP, 18"L,72"W,35K,NO TAPER	] 1
			20"	852050.1072200	LIP, 20"L,72"W,35K,NO TAPER	
			16"	852050.1272160	LIP, 16"L,72"W,45K,NO TAPER	]
		40K / 45K	18"	852050.1272180	LIP, 18"L,72"W,45K,NO TAPER	
			20"	852050.1272200	LIP, 20"L,72"W,45K,NO TAPER	
			16"	852050.10831601	LIP, 16"L,83"W,30K,NO TAPER	
			10	852050.10831611	LIP, 16"L,83"W,30K,TAPER	]
		30K	18"	852050.10831801	LIP, 18"L,83"W,30K,NO TAPER	]
		SUK	10	852050.10831811	LIP, 18"L,83"W,30K,TAPER	
11			20"	852050.10832001	LIP, 20"L,83"W,30K,NO TAPER	
			20	852050.10832011	LIP, 20"L,83"W,30K,TAPER	
			16"	852050.1083160	LIP, 16"L,83"W,35K,NO TAPER	
			10	852050.1083161	LIP, 16"L,83"W,35K,TAPER	
	M78WD	35K	18"	852050.1083180	LIP, 18"L,83"W,35K,NO TAPER	] ,
	INITOWN	331	10	852050.1083181	LIP, 18"L,83"W,35K,TAPER	] '
			20"	852050.1083200	LIP, 20"L,83"W,35K,NO TAPER	
			20	852050.1083201	LIP, 20"L,83"W,35K,TAPER	
			16"	852050.1283160	LIP, 16"L,83"W,45K,NO TAPER	]
			10	852050.1283161	LIP, 16"L,83"W,45K,TAPER	]
		40K / 45K	18"	852050.1283180	LIP, 18"L,83"W,45K,NO TAPER	]
		401( / 431(	10	852050.1283181	LIP, 18"L,83"W,45K,TAPER	]
			20"	852050.1283200	LIP, 20"L,83"W,45K,NO TAPER	]
				852050.1283201	LIP, 20"L,83"W,45K,TAPER	

				SEF	RVICE PARTS LISTS	
ITEM #	MODEL#	CAPACITY (CIR) (POUNDS)	LIP SIZE (INCHES)	PART #	PART DESCRIPTION	QTY PER LEVELER
12					REPLACEMENT LIP HINGE SHAFTS W/ HARDWARE KIT	
13	M68WD	ALL	ALL	852500.0001	SHAFT, LIP HINGE,35.75IN	2
14	IVIOOVVD	ALL	ALL	032300.0001	PIN, COTTER, PLATED	2
15					FLAT WASHER, PLATED	2
12					REPLACEMENT LIP HINGE SHAFTS W/ HARDWARE KIT	
13	M78WD	ALL	ALL	852500.0023	SHAFT, LIP HINGE,41.25IN	2
14	IVITOVVD	ALL	ALL	032300.0023	PIN, COTTER, PLATED	2
15					FLAT WASHER, PLATED	2
			1			
16					REPLACEMENT LIP KICKOUT LEVELER W/ HARDWARE KIT	
17					LEVER, LIP KICKOUT	1
18	ALL	ALL	ALL	852500.0002	PIN, CLEVIS, PLATED	1
19					PIN, COTTER, PLATED	1
20					FLAT WASHER, PLATED	1
21					REPLACEMENT LIP MAINTENANCE BRACE W/HARDWARE KIT	
22					LIP MAINTENANCE BRACE	1
18	ALL	ALL	ALL	852500.0003	PIN, CLEVIS, PLATED	1
23	ALL	ALL		002000.0000	PIN, COTTER, PLATED	1
20					FLAT WASHER, PLATED	1
24					SCREW, THUMB	1

				SER	VICE PARTS LISTS	
ITEM #	MODEL #	CAPACITY (CIR) (POUNDS)	LIP SIZE (INCHES)	PART #	PART DESCRIPTION	QTY PER LEVELER
89	ALL	ALL	ALL	852500.0021	DECK TRANSPORTATION LOOP KIT	
90	ALL	ALL	ALL	002000.0021	DECK TRANSPORTATION LOOP	4
96	ALL	ALL	ALL	609431.12401*	SCREW, SOCKET HEAD CAP	4
97	ALL	ALL	ALL	080352.1210	NUT, HEX, PLATED	1
98	ALL	ALL	ALL	604701.1232	BOLT, HEX, PLATED	1
99	M68WD	ALL	ALL	852282.0001	PLATE, LEVELING	2
99	M78WD	ALL	ALL	852282.0003	7 PLATE, LEVELING	2
100	ALL	ALL	ALL	852334.0001*	PLUGS, DECK LARGE	4
101	ALL	ALL	ALL	852334.0002*	PLUGS, DECK SMALL	4
105	ALL	ALL	ALL	606699.0400	PAINT,SPRAY,120Z,DOCK GRAY	1
106	ALL	ALL	ALL	606699.0401	PAINT,BOTTLE,.50Z w/BR,D0CK GRAY	1

**NOTE:** \* When PART # is ordered, quantity of 1 is shipped (not the QTY PER LEVELER).

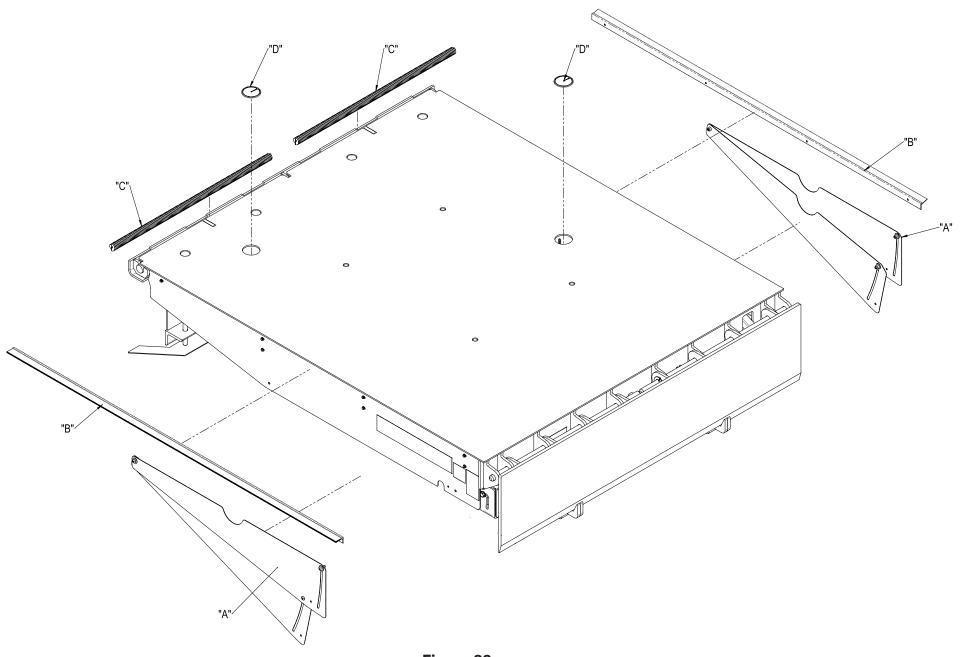


Figure 30

**NOTE:** Right and left hand is always determined from outside the building looking in.

			SERVI	CE PARTS LISTS	
ITEM	MODEL	P/	ART#	PART DESCRIPTION	STANDARD/OPTION
IIEIVI	IVIODEL	LH	RH	PART DESCRIPTION	STANDARD/OFTION
Α	ALL	852310.0001	852310.0002	FULL RANGE TOE GUARDS	OPTION
			N/A	NONE	STANDARD
		9522	19.0001	SIDE SEAL (BRUSH)	OPTION
В	ALL	6323	19.0001	SIDE SEAL (BRUSH)	2 PER LEVELER
		9572	19.0002	SIDE SEAL (RUBBER)	OPTION
		6525	113.0002	SIDE SEAL (NOBBER)	2 PER LEVELER
	ALL		N/A	NONE	STANDARD
	M68WD	9522	32.0001	REAR SEAL (BRUSH)	OPTION
С	IVIOOVVD	8323	32.0001	REAR SEAL (BROSH)	2 PER LEVELER
	M78WD	9522	32.0003	REAR SEAL (BRUSH)	OPTION
	IVI76VVD	8323	32.0003	REAR SEAL (BROSH)	2 PER LEVELER
			N/A	NONE	STANDARD
D	ALL	8523	35.0001 (*)	CHAIN HOLE SEAL (BRUSH)	OPTION
		8323	33.0001()	CHAIN HOLE SEAL (BROSH)	2 PER LEVELER

**NOTE:** \* When PART # is ordered, quantity of 1 is shipped (not the QTY PER LEVELER).



# Dock Mechanical Pit Leveler Limited Warranty

Wayne Dalton®, a division of Overhead Door Corporation ("Seller") warrants to the original purchaser of Mechanical Pit Leveler ("Product"), subject to all of the terms and conditions hereof, that the Product and all components thereof will be free from defects in materials and workmanship under normal use for the following period, measured from the earlier of the date of installation by original purchaser or 60 days after shipping by Seller, provided that the owner maintains and operates the Product in accordance with the Owner's Manual.

- Seller's warranty covers the repair or replacement of the Product or its components for a period of 12
- months.

  The main spring has a limited prorated warranty for an additional 4 years following the 12-month warranty, for a total l of 60

will be the responsibility of the purchaser Seller's obligation under this warranty is specifically limited to repairing or replacing, at its option, any part which is determined by Seller to be defective during the applicable warranty period. Repair or replacement labor for any defective Product part or component is included for a period of one (1) year from the date of installation. After that, any labor charges are excluded and

This warranty is made to the original purchaser of the Product only, and it is not transferable or assignable. This warranty does not apply to any unauthorized alteration or repair of the Product, or to any Product or component which has been damaged or deteriorated due to improper installation, improper operation, operation beyond capacity, misuse, neglect, accident, failure to provide necessary maintenance, normal wear and tear, or acts of God or any other cause beyond the reasonable control of

THIS WARRANTY IS EXCLUSIVE INCLUDING BUT NOT LIMITED PARTICULAR PURPOSE. TO ANY I LIEU OF ANY OTHER WARRANTIES, EITHER EXPRESS OR IMPLIED, WARRANTY OF MERCHANTABILITY OR FITNESS FOR A

IN NO EVENT SHALL SELLER BE RESPONSIBLE FOR, OR LIABLE TO ANYONE FOR, SPECIAL, INDIRECT, COLLATERAL, PUNITIVE, INCIDENTAL OR CONSEQUENTIAL DAMAGES, even if Seller has been advised of the possibility of such damages. Such excluded damages include, but are not limited to, loss of goodwill, loss of profits, loss of use, cost of any substitute product, interruption of business, other similar indirect financial loss or arising out of or related to the use, installation or maintenance of the Product (including premature product wear, product failure, property damage or bodily injury resulting from use of unauthorized replacement parts or modification of the Product). Seller's sole obligation with regard to a Product that is claimed to be deficient in material or workmanship shall be as set forth in this Limited Warranty.

Seller or to the authorized distributor or installer whose name and address appear below. The purchaser mu reasonable opportunity to inspect any Product claimed to be defective prior to removal or any alteration of its of the purchase and/or installation date, and identification as the original purchaser, may be required. Claims under this warranty must be made promptly after discovery, within the applicable warranty period, and in writing to the Seller or to the authorized distributor or installer whose name and address appear below. The purchaser must allow Seller a

L PURCHASER:  ATION ADDRESS:  S ADDRESS:  Y ORDER #:  INSTALLATION:  IRE OF DEALER:		NAL PURCHASER:	LLATION ADDRESS:	R	R'S ADDRESS:	DRY ORDER#	OF INSTALLATION:	'URE OF DEALER:		MODEL:  ORIGINAL PURCHASER:  INSTALLATION ADDRESS:  DEALER:  DEALER:  DEALER'S ADDRESS:  FACTORY ORDER #:  DATE OF INSTALLATION:  SIGNATURE OF DEALER:  SIGNATURE OF DEALER:	
---	--	----------------	------------------	---	--------------	------------	------------------	-----------------	--	--	--