

WayneGard Series

QI Vertical Track Assembly

Models: 9100/9600/9900

Installation Instructions Insert

PORTLAND PRODUCTION

Use this insert in conjunction with the installation manual provided with the door. Replace the corresponding steps in the installation manual with the steps in this insert.

②

Installing the Q.I. Jamb Brackets

Measure the length of the vertical tracks. Using the jamb bracket schedule, determine the placement of the jamb brackets for your door height and track type. Install the jamb brackets into the appropriate hole at their respective locations (see Fig. 3).

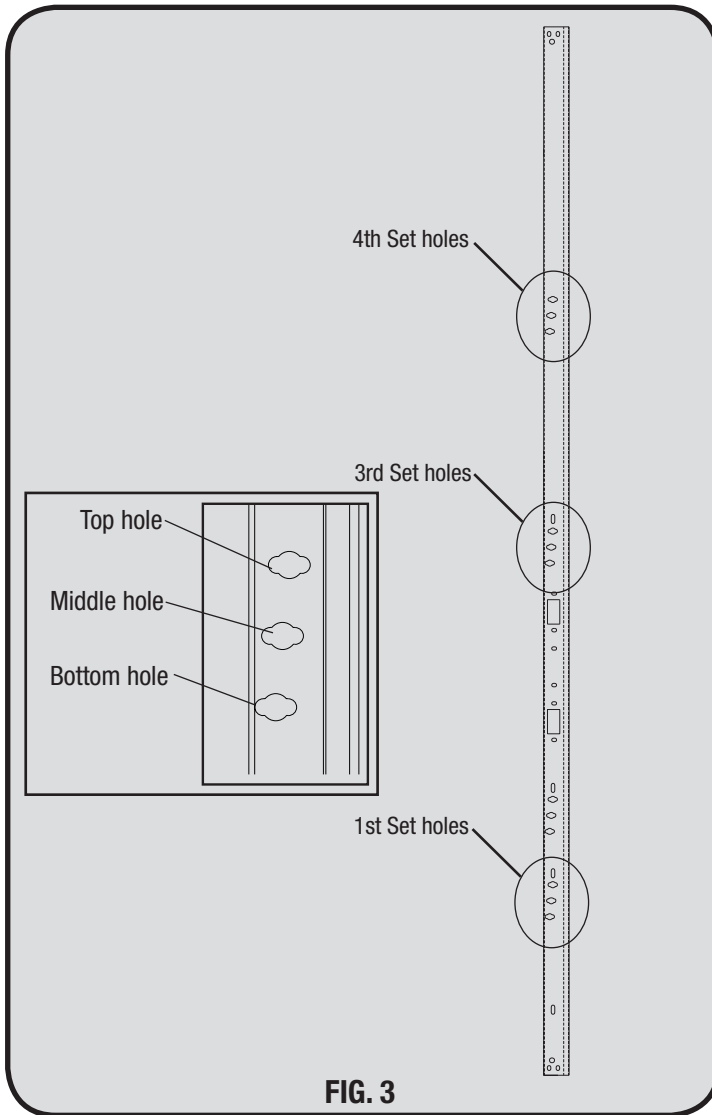


FIG. 3

BMW QUICK INSTALL TRACK STANDARD LIFT AND LOW HEADROOM

DOOR HEIGHT	10"R / 12"R	14"R	LHR
6'0"	62" TRACK (1575 mm)	64" TRACK (1626 mm)	57" TRACK (1448 mm)
6'5"	67" TRACK (1702 mm)	69" TRACK (1753 mm)	62" TRACK (1575 mm)
6'8"	70" TRACK (1778 mm)	72" TRACK (1829 mm)	65" TRACK (1651 mm)
7'0"	74" TRACK (1880 mm)	76" TRACK (1930 mm)	69" TRACK (1753 mm)
7'3"	77" TRACK (1956 mm)	79" TRACK (2007 mm)	72" TRACK (1829 mm)
7'6"	80" TRACK (2032 mm)	82" TRACK (2083 mm)	75" TRACK (1905 mm)
8'0" 4 & 5 SECTION	86" TRACK (2184 mm)	88" TRACK (2235 mm)	81" TRACK (2057 mm)

BMW QUICK INSTALL TRACK QUICK INSTALL JAMB BRACKET LOCATION

DOOR HEIGHT	1ST SET		3RD SET		4TH SET	
	JAMB BRACKET	POSITION	JAMB BRACKET	POSITION	JAMB BRACKET	POSITION
6'0"	QIJB - 3	MIDDLE	QIJB - 6	TOP	NOT APPLICABLE	
6'5"	QIJB - 3	MIDDLE	QIJB - 5	BOTTOM	NOT APPLICABLE	
6'8"	QIJB - 3	MIDDLE	QIJB - 5	BOTTOM	NOT APPLICABLE	
7'0"	QIJB - 3	MIDDLE	QIJB - 5	BOTTOM	NOT APPLICABLE	
7'3"	QIJB - 3	MIDDLE	QIJB - 5	MIDDLE	QIJB - 6	MIDDLE
7'6"	QIJB - 3	MIDDLE	QIJB - 5	MIDDLE	QIJB - 6	MIDDLE
8'0" 4 SECT.	QIJB - 3	MIDDLE	QIJB - 5	MIDDLE	QIJB - 6	MIDDLE
8'0" 5 SECT.	QIJB - 3	BOTTOM	QIJB - 5	BOTTOM	QIJB - 6	BOTTOM