

# Supplemental Instructions FOR FASTENING THE OUTSIDE HANDLE

Wayne Dalton, a division of Overhead Door Corporation  
P.O. Box 67 Mt. Hope, OH 44660  
www.Wayne-Dalton.com


Use these instructions in conjunction with the installation instructions provided with the lock

**NOTE:** For (8000 Series Doors Only), if the described holes are 3/16" Dia., use the supplied phillips head machine screws to attach the outside handle. If the described holes are 3/4" Dia., use the supplied escutcheon fasteners to secure the outside handle, as shown in the installation instructions manual.

## All 9000 Series & Wood Doors, See Step 3.

(2) Foam tape  
(9100/9600/9900)  
3/4" x 2-1/2" #306653  
**NOTE:** Foam tape replaces  
(4) #8 -1/2" screws

Universal Lock stile  
(9100/9600 & 9900)  
#261964

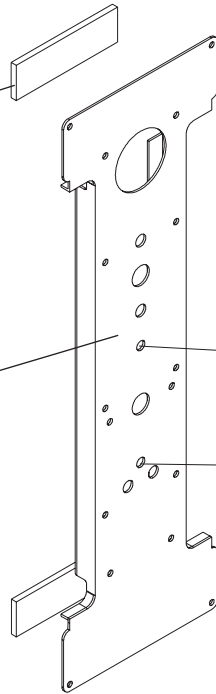


Lock backup plate  
(8300/8500 & wood)  
#128564

Phillips head machine screws

- (2) 1" (9100) #306564
- (2) 1-1/4" (9600 & wood)#306565
- (2) 1-1/2" (9900) #306566

## All 8000 Series Doors, See Step 4.

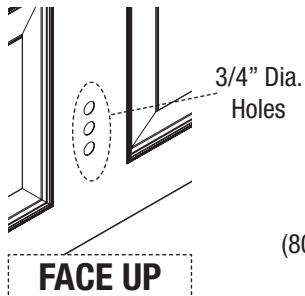

Center stile  
(8000/8100 & 8200)

(2) Pre-punched holes

**NOTE:** if pre-punched holes in center stile are 3/4" dia., use the escutcheon fasteners. If the holes are 3/16" dia., use the center stile as a guide to drill 1/8" pilot holes completely through the section. Flip the section over (face up) and enlarge holes to 3/4" dia. Pay close attention not to drill completely through section into center stile.

**NOTE:** If holes are 3/16" dia., use phillips head machine screws (2) 1-3/4" (8000) #306567

**FACE DOWN**